


Home Automatic Washers

Refer to Page 4 for Model Numbers

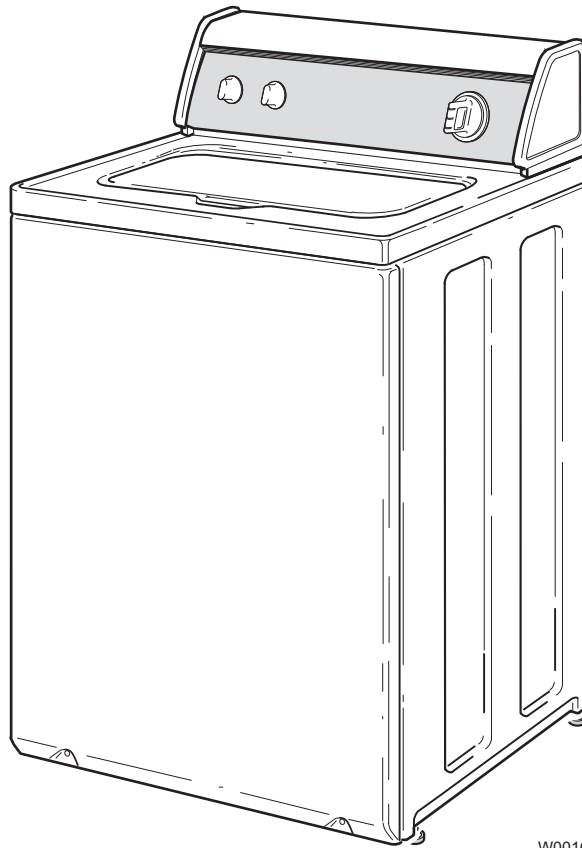

W001C

— Troubleshooting —

Table of Contents

Section 1 – Safety Information	2
Locating an Authorized Servicer.....	3
Section 2 – Introduction	4
Model Identification	4
How Your Washer Works	5
Customer Service.....	7
Nameplate Location.....	7
Section 3 – Troubleshooting.....	8
1. Clicking Noise During Operation on NEWLY Installed Units	8
2. Motor Hums	9
3. No Hot Water	10
4. No Cold Water	11
5. No Warm Water	12
6. Water Fill Does Not Stop At Proper Level.....	13
7. Timer Does Not Advance	14
8. Motor Does Not Run.....	15
9. No Agitation.....	16
10. Constant Agitation	17
11. Washer Overheats, Cycles On Motor Thermal Protector, Switch Actuator Kicks In And Out	18
12. Slow Spin.....	19
13. No Spin	20
14. Constant Spin	21
15. Washer Stops In Cycle; Quits After A Couple Loads; Is Intermittent	22
16. Washer Is Locked Up Or Binding.....	23
17. Outer Tub Does Not Empty	24
18. Excessive Vibration	25
19. Water Leaking From Outer Tub.....	26
Section 4 – Adjustments	27
20. Leveling Legs.....	27
21. Pressure Switch.....	28
22. Belt (Agitate And Spin)	28
Section 5 – Test Procedures	29
23. Motor Test Procedure.....	29
24. Mixing Valve Solenoid Test Procedure	30
25. Temperature Switch Test Procedure	30
Section 6 – Cycle Sequence Charts.....	31
Timer No. 37927 Cycle Sequence	31
Timer No. 37929 Cycle Sequence	32
Timer No. 200927P Cycle Sequence	33
Timer No. 201101 Cycle Sequence	34
Timer No. 201100 Cycle Sequence	35
Timer No. 202705 and 203387 Cycle Sequence	36
Timer No. 202705 and 203387 Cycle Sequence	37

© Copyright 2016, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Section 1

Safety Information

Throughout this manual and on machine decals, you will find precautionary statements (“CAUTION,” “WARNING” and “DANGER”) followed by specific instructions. These precautions are intended for the personal safety of the operator, user, servicer, and those maintaining the machine.

DANGER

Danger indicates an imminently hazardous situation that, if not avoided, will cause severe personal injury or death.

WARNING

Warning indicates a hazardous situation that, if not avoided, could cause severe personal injury or death.

CAUTION

Caution indicates a hazardous situation that, if not avoided, may cause minor or moderate personal injury or property damage.

Additional precautionary statements (“IMPORTANT” and “NOTE”) are followed by specific instructions.


IMPORTANT

The word “IMPORTANT” is used to inform the reader of specific procedures where minor machine damage will occur if the procedure is not followed.

NOTE

The word “NOTE” is used to communicate installation, operation, maintenance or servicing information that is important but not hazard related.

In the interest of safety, some general precautions relating to the operation of this machine follow.

	WARNING
<ul style="list-style-type: none">• Failure to install, maintain and/or operate this product according to the manufacturer’s instructions may result in conditions which can produce serious injury, death and/or property damage.• Do not repair or replace any part of the product or attempt any servicing unless specifically recommended or published in this Service Manual and unless you understand and have the skills to carry out the servicing.• Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the product is properly grounded and to reduce the risk of fire, electric shock, serious injury or death.	
<small>W006R2</small>	

**WARNING**

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

**WARNING**

Repairs that are made to your products by unqualified persons can result in hazards due to improper assembly or adjustments subjecting you, or the inexperienced person making such repairs, to the risk of serious injury, electrical shock, or death.

W007

**WARNING**

If you or an unqualified person perform service on your product, you must assume the responsibility for any personal injury or property damage which may result. The manufacturer will not be responsible for any injury or property damage arising from improper service and/or service procedures.

W008

NOTE: The WARNINGS and IMPORTANT INSTRUCTIONS appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when installing, maintaining or operating the machine.

Always contact your dealer, distributor, service agent or the manufacturer about any problems or conditions you do not understand.

Locating an Authorized Servicer

Alliance Laundry Systems is not responsible for personal injury or property damage resulting from improper service. Review all service information before beginning repairs.

Warranty service must be performed by an authorized technician, using authorized factory parts. If service is required after the warranty expires, Alliance Laundry Systems also recommends contacting an authorized technician and using authorized factory parts.

Section 2

Introduction


Model Identification

Information in this manual is applicable to these washer models.

Model Number	1 Speed Motor	2 Speed Motor	3 Speed Motor	Porcelain Washtub (cu. ft.)	Stainless Steel Washtub (cu. ft.)
AWNA11SP111TW01	X				3.3
LWN412SP111TW01		X			3.3
LWN432SP113TW01		X			3.3
LWN432SP113TW04		X			3.3
LWNA11SP111TW01	X				3.3
LWNA11SP112TW01	X				3.3
LWNA11WP111TW01	X			3.3	
LWNB11SP111TW01	X			3.3	
LWNB11SP111TWAA	X				3.3
LWS01A*	X			2.9	
LWS01A*C	X			2.9	
LWS01B*	X			2.9	
LWS01M*	X			2.9	
LWS01N*	X			2.9	
LWS02A*	X			3.3	
LWS02B*	X			3.3	
LWS02M*	X			3.3	
LWS02N*	X			3.3	
LWS04M*	X				3.3
LWS04N*	X				3.3
LWS05N*	X				3.3
LWS16A*	X			3.3	
LWS16B*	X			3.3	
LWS16M*	X			3.3	
LWS16N*	X			3.3	
LWS17A*	X				3.3
LWS17B*	X				3.3
LWS17M*	X				3.3
LWS17N*	X				3.3
LWS44N*		X			3.3
LWS45A*		X			3.3
LWS45B*		X			3.3
LWS45M*		X			3.3
LWS45N*		X			3.3
LWS49N*		X			3.3

* Add Letter To Designate Color. L – Almond W – White Q – Bisque

How Your Washer Works

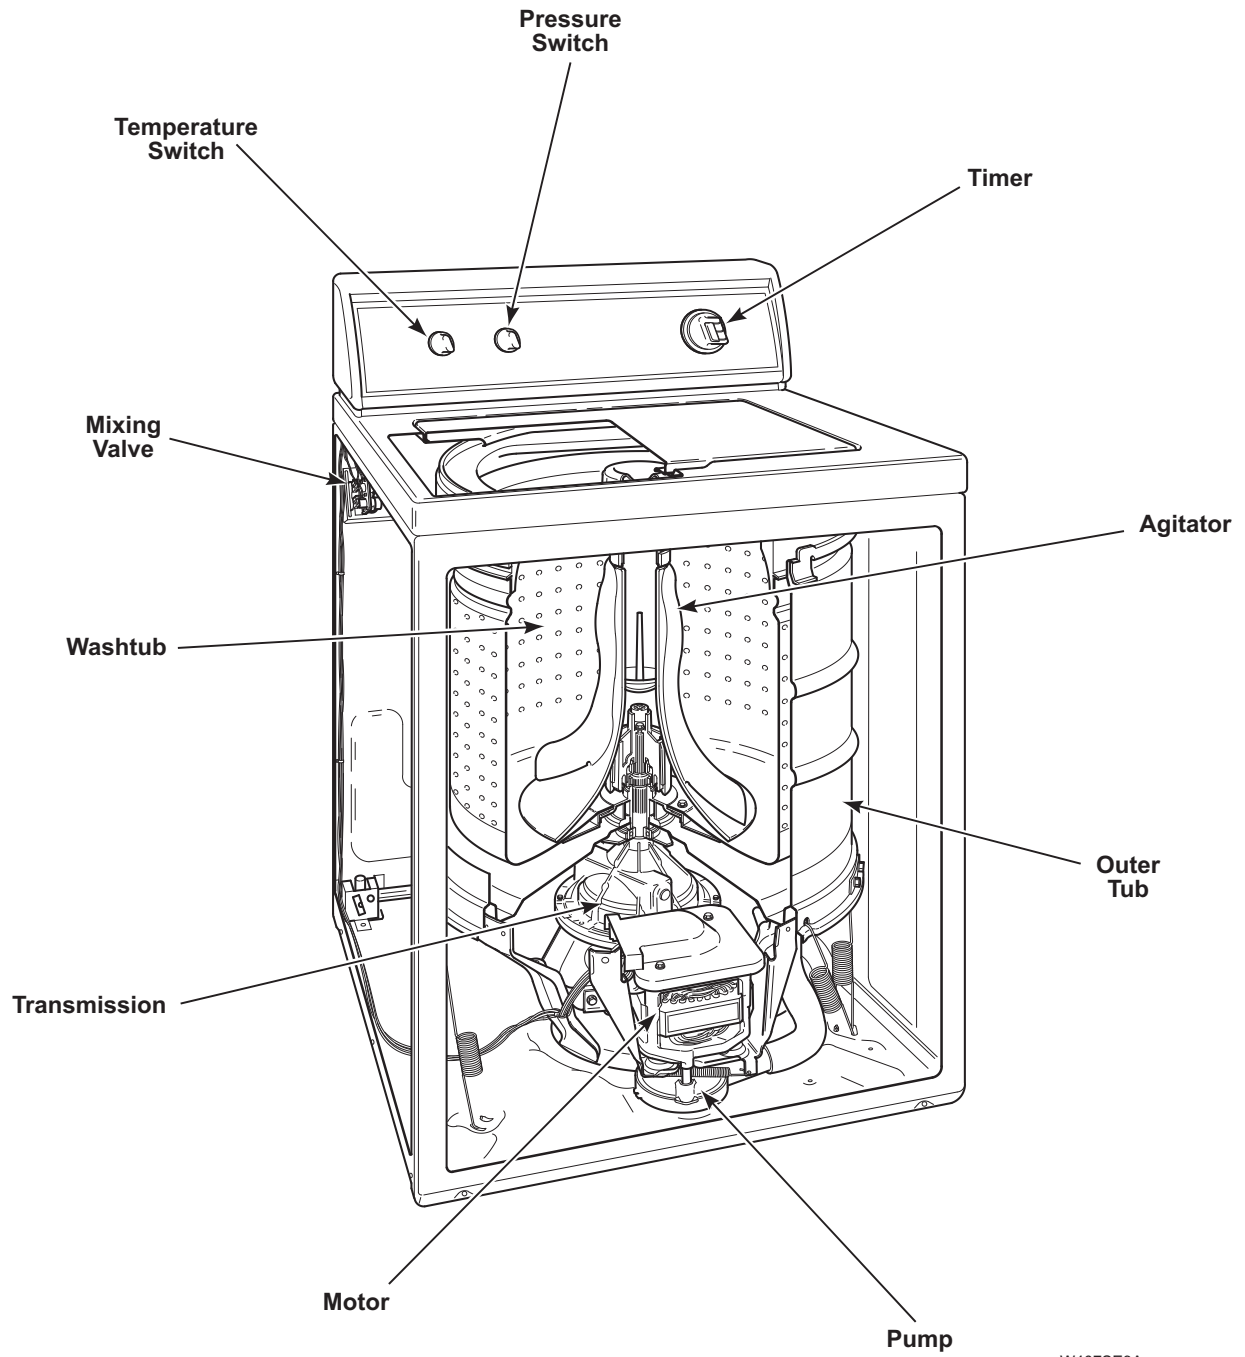

W407SE3A

Introduction

The cycle begins with a wash fill. The water temperature is determined by the temperature selector. While water fills the washtub, a column of air is trapped in a pressure bulb and hose. The air pressure continues to increase as the washtub fills with water until it is great enough to activate the pressure switch. The pressure switch then causes the wash fill to stop and wash agitation to begin. However, the loading door must be closed for the washer to agitate or spin.

During agitation, the motor runs in the counterclockwise direction. The spring tension on the idler pulley applies the tension required to reduce the slack on the drive belt and maintain maximum belt to motor pulley contact. This eliminates belt slippage and ensures an efficient wash action, even with extra large loads.

The belt drives the transmission drive pulley in the counterclockwise direction. The pulley drives the helix which is splined to the input shaft of the transmission. This causes the input shaft to turn inside of a roller clutch which is pressed into the transmission cover. This roller clutch acts as a bearing in the counterclockwise direction allowing the transmission gears to operate. The transmission's rack and pinion gear design produces a 210 degree agitation stroke at the output shaft of the transmission which drives the agitator. The brake assembly remains locked during the agitation mode since no pressure is applied to it by the transmission drive pulley.

After the wash agitation is completed, the timer advances into the first spin. During spin, the motor reverses turning in the clockwise direction to spin the water out of the washtub. The combination of water, washtub and load weight cause the drive belt tension on the idler side of the belt to overtake the idler spring pressure allowing the belt to become slack on the opposite side. This reduces the belt to pulley contact and allows slipping between the belt and pulley.

As water is removed by the pump and the momentum of the washtub increases, the idler spring tension gradually overcomes the belt tension removing the belt slack. This eventually increases the belt to pulley contact until maximum spin speed is achieved.

The drive pulley turns clockwise riding up the ramps of the helix, exerting pressure on the brake and forcing it to release from brake pads. The helix drives the input shaft of the transmission, and when the input shaft turns in the clockwise direction the roller clutch locks onto the shaft causing the entire transmission assembly to turn. None of the gears in the transmission are operating at this time. The hub of the washtub is splined to the transmission tube and rotates with the transmission assembly. The centrifugal force created by the spinning washtub causes water to be extracted from the clothes.

Water is introduced during the first spin to "SPRAY" the garments and remove suds from them. The initial spin is followed by rinse agitation to rinse away any detergent residue. The washer fills and then agitates like the wash portion of the cycle. Following rinse agitation, a final spin extracts the rinse water from the clothes preparing them for the dryer.


Customer Service

If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.

For technical assistance, call (920) 748-3121.

Nameplate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on nameplate(s) as shown.

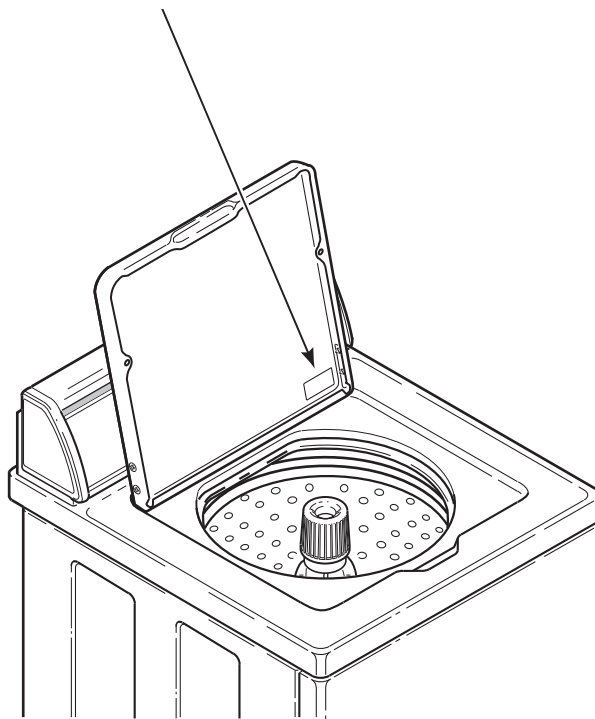

W429SE1B

Section 3

Troubleshooting



WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

IMPORTANT: Refer to wiring diagram for aid in testing washer components.

1. Clicking Noise During Operation on NEWLY Installed Units


If a clicking noise is heard when first starting up a new topload washer, the noise is related to the belt taking a temporary “set” around the idler pulley. The set causes a slight bump in the belt which in turn causes the idler lever to tap the motor bracket making the clicking noise. **THE BELT DOES NOT NEED TO BE REPLACED.**

To correct this condition please perform the following break-in procedure:

1. After installing the unit start a fill cycle to make sure the seals have been lubricated.
2. Stop the fill cycle and place the unit into a spin cycle.
3. Run the cycle for several minutes until the belt has warmed up. This will remove the “set.”
4. Normal use will keep the belt from resetting.
5. For extended periods of non-use (three to four weeks), this procedure might need to be repeated.


2. Motor Hums

A topload washer exhibiting a humming motor in agitation or spin may require the timer or motor to be replaced. Refer to flow chart below to determine if the motor or timer needs to be replaced.

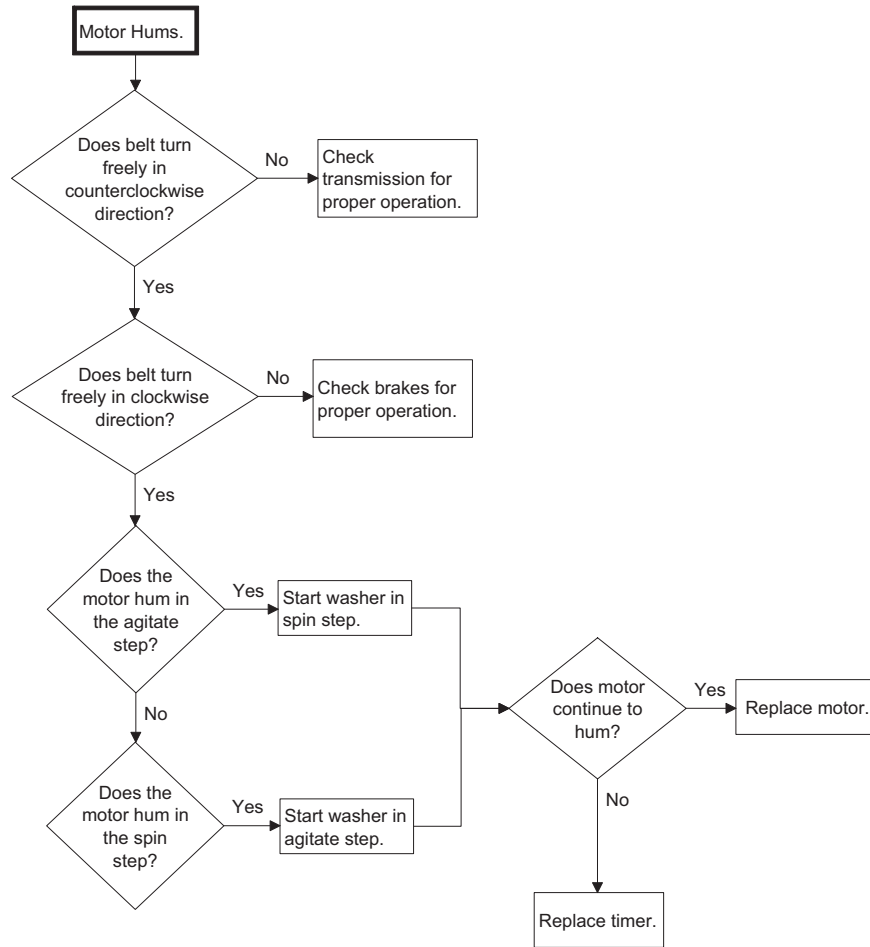


TLW403S

3. No Hot Water

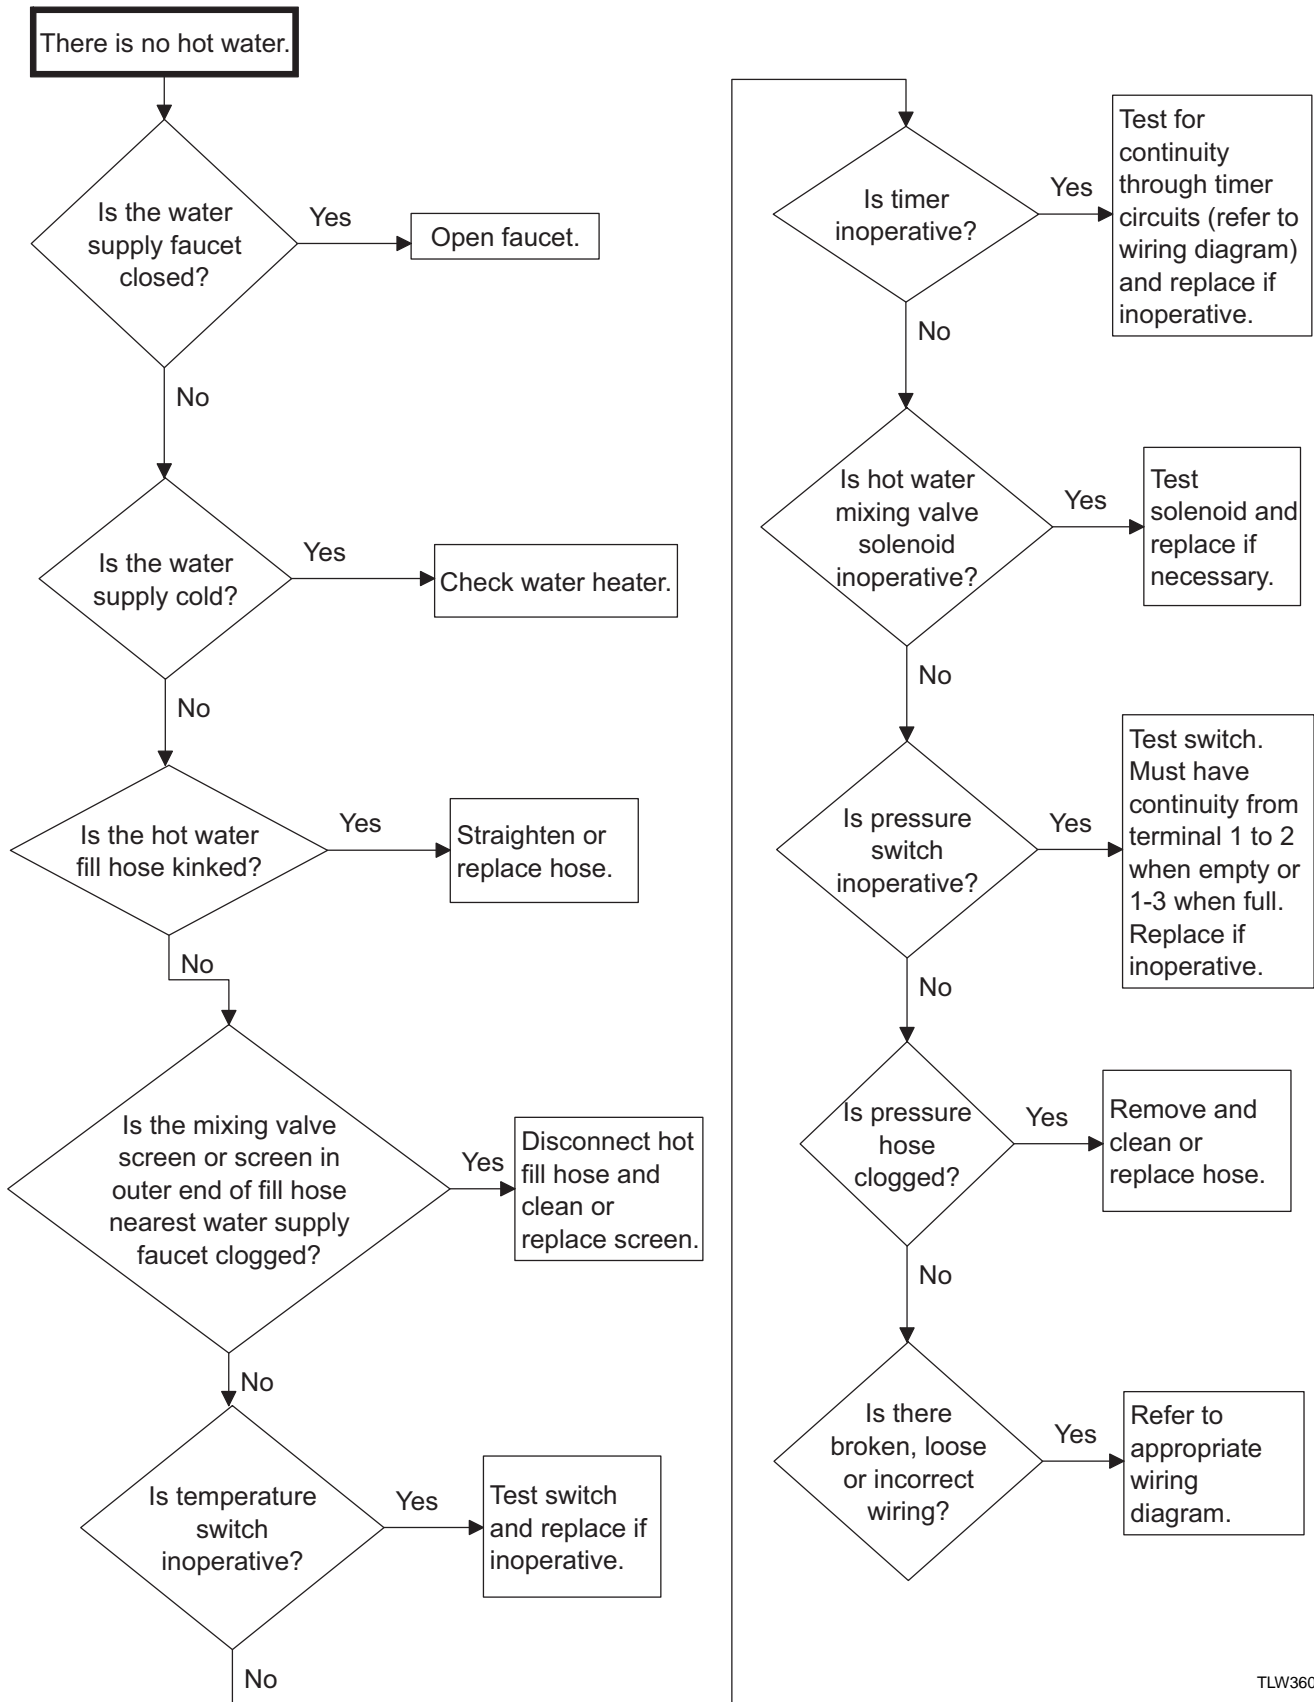


TLW360S

4. No Cold Water

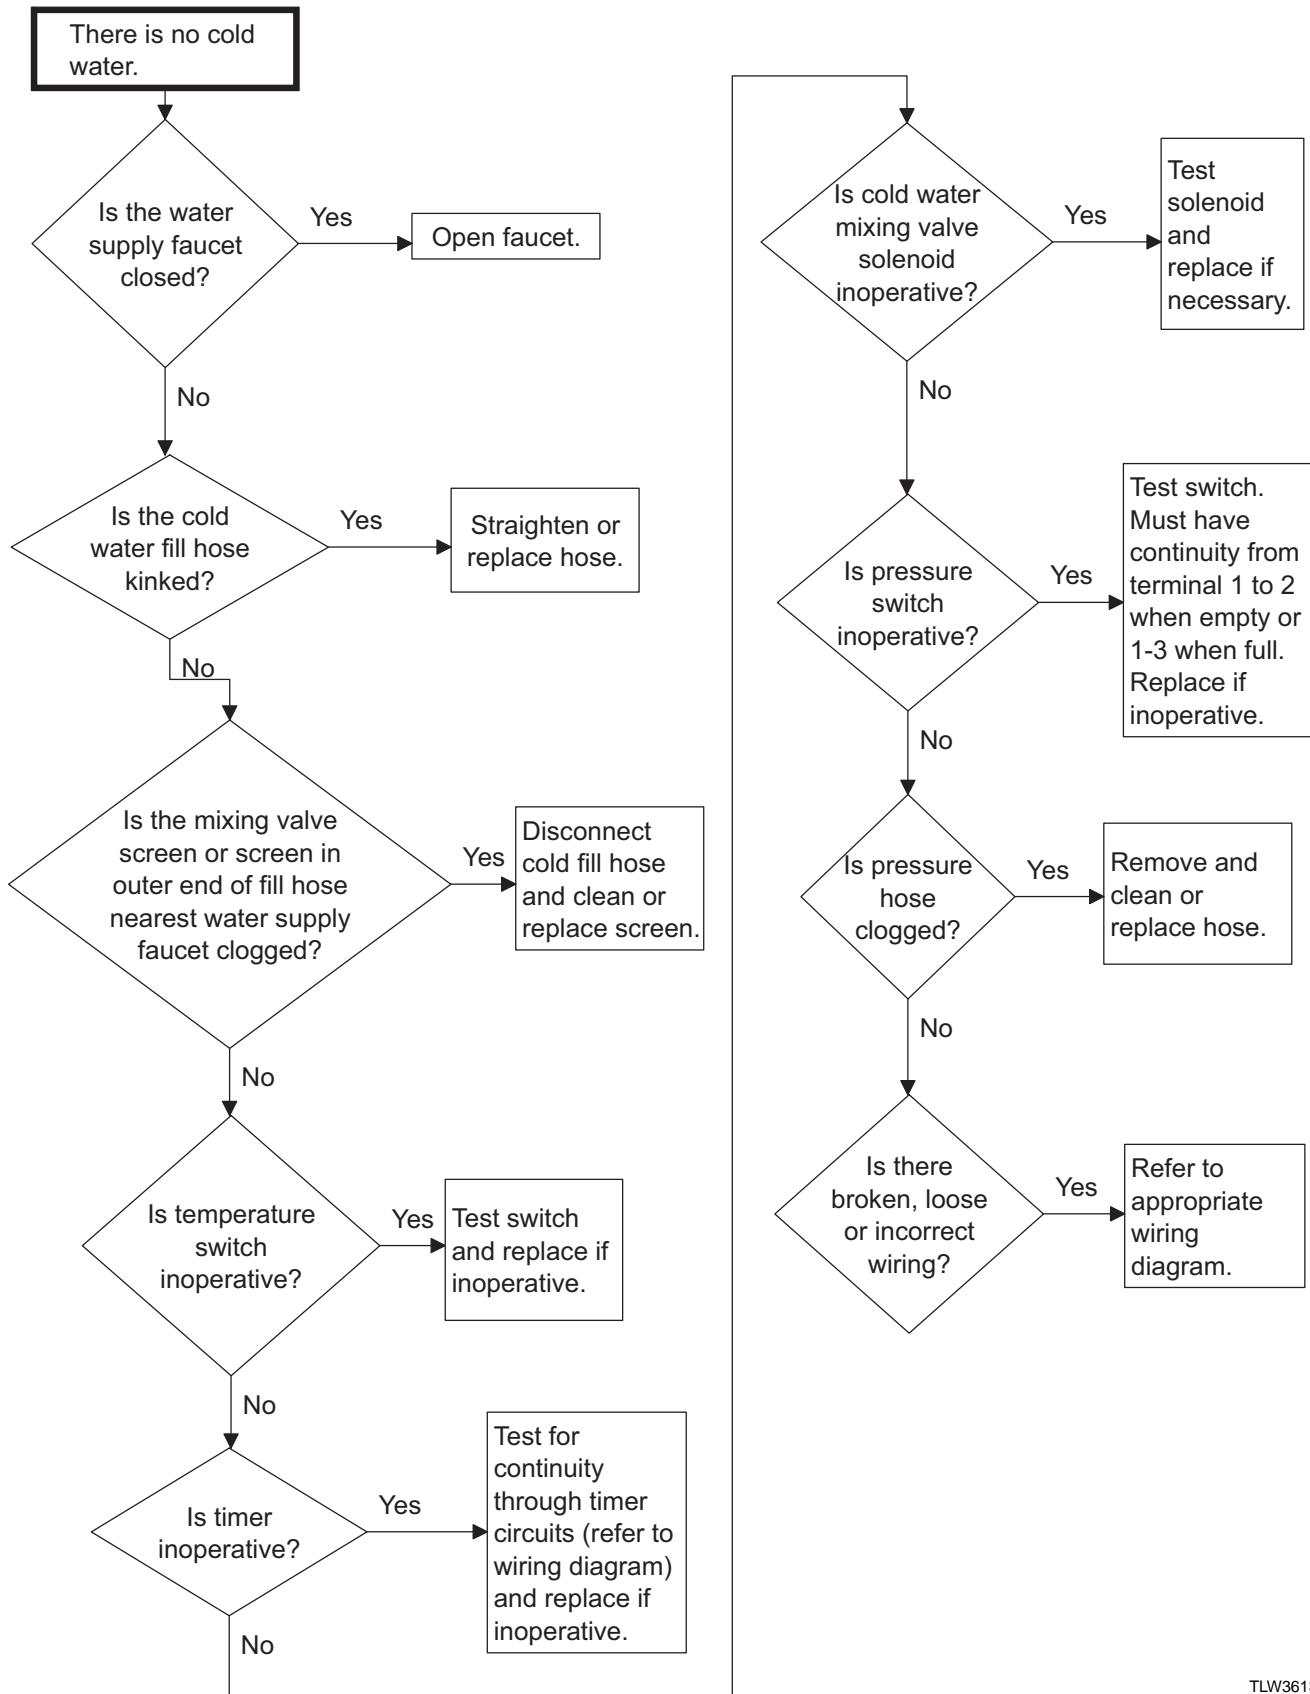


TLW361S

5. No Warm Water

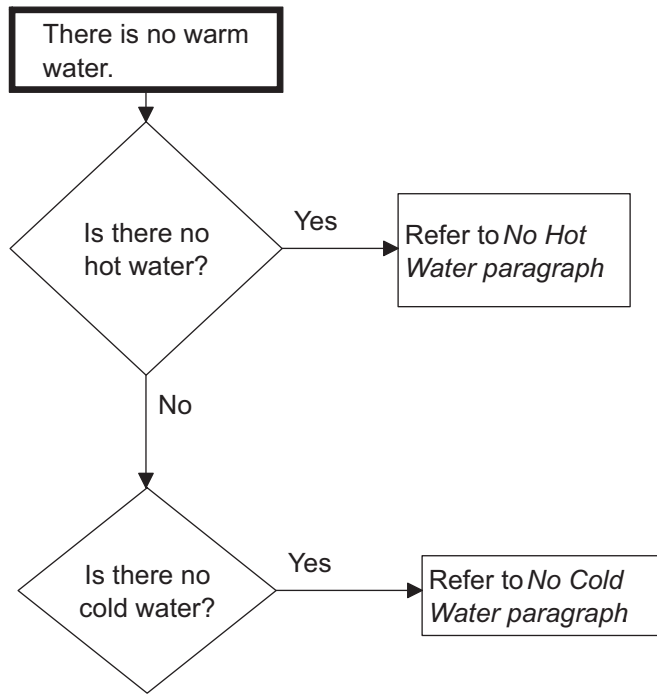


TLW362S

6. Water Fill Does Not Stop At Proper Level

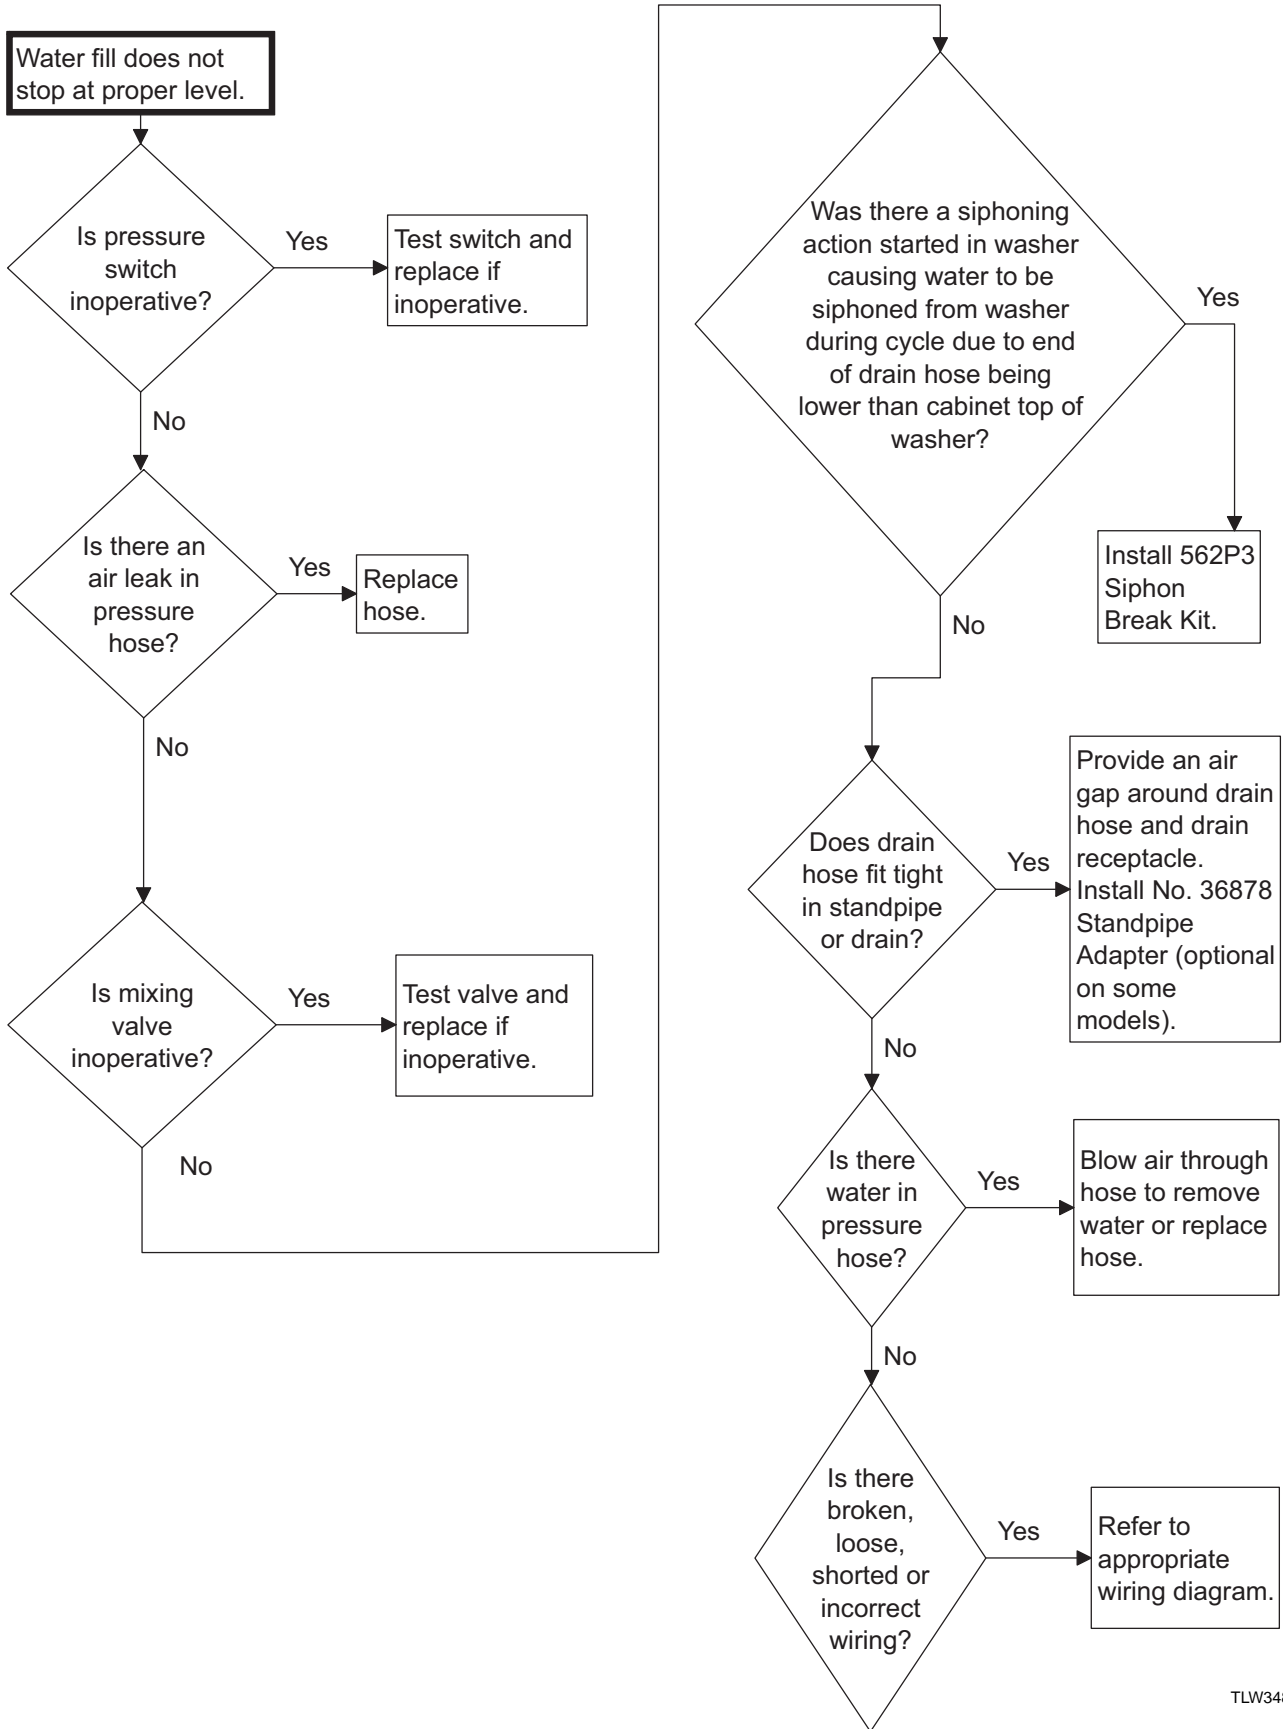


TLW348S

7. Timer Does Not Advance

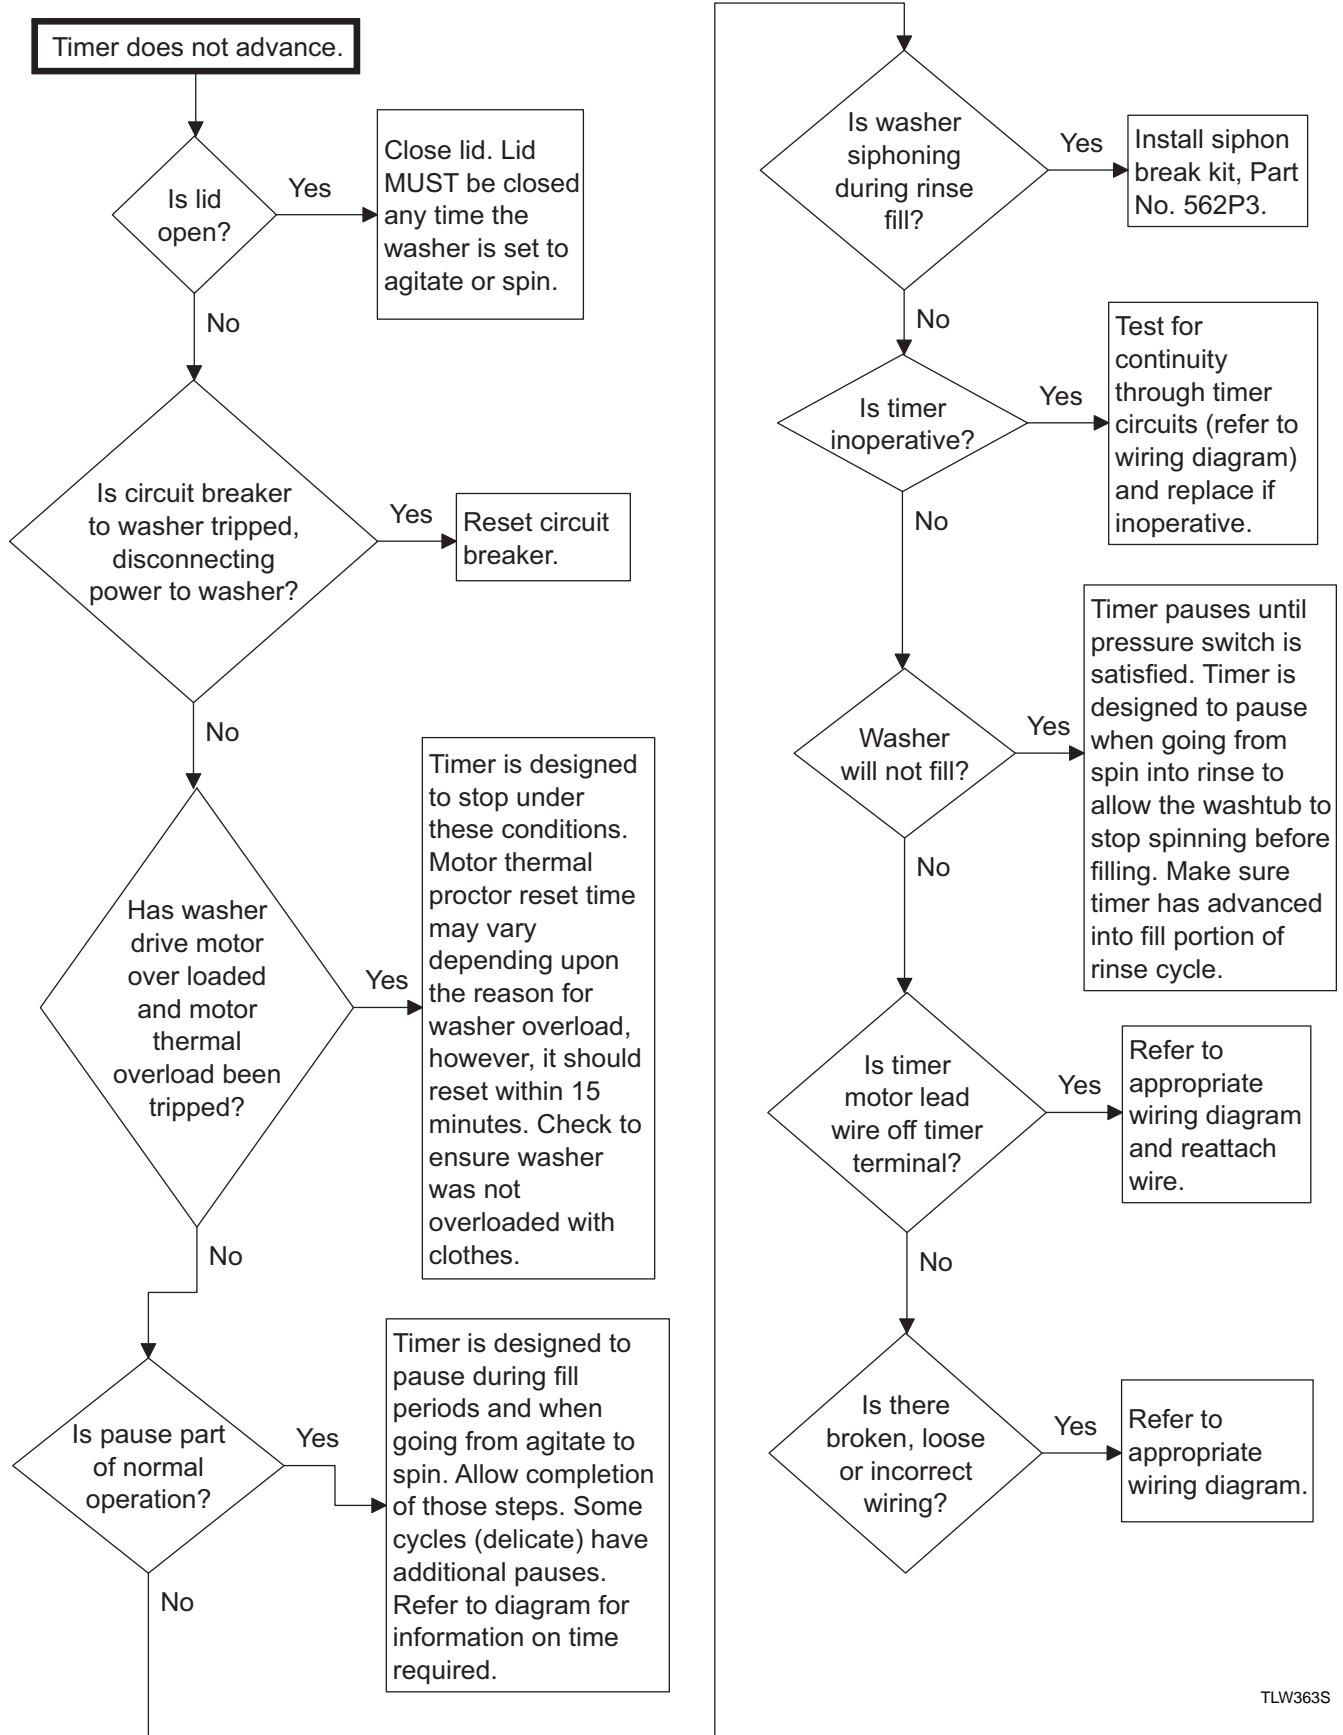


TLW363S

8. Motor Does Not Run

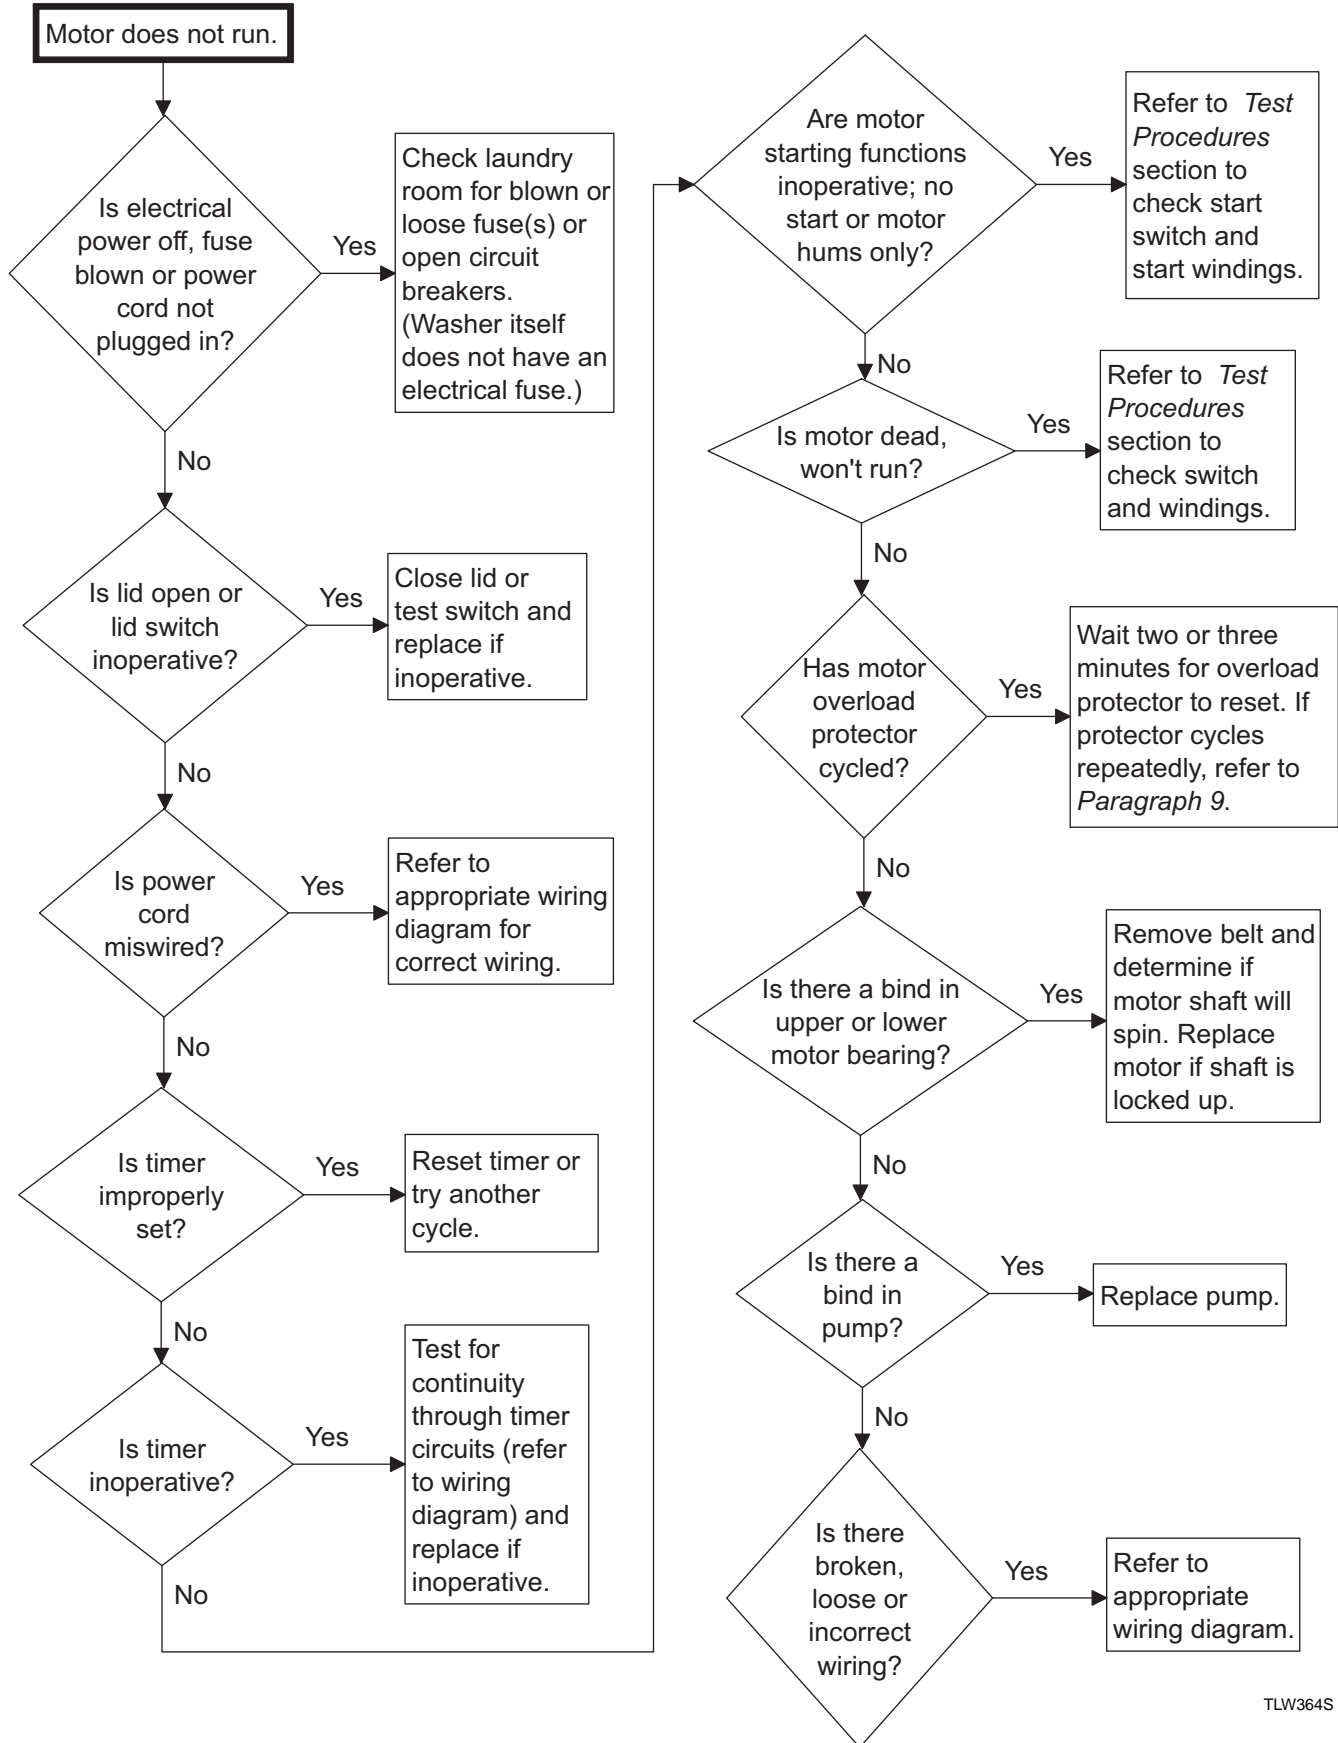


TLW364S

9. No Agitation

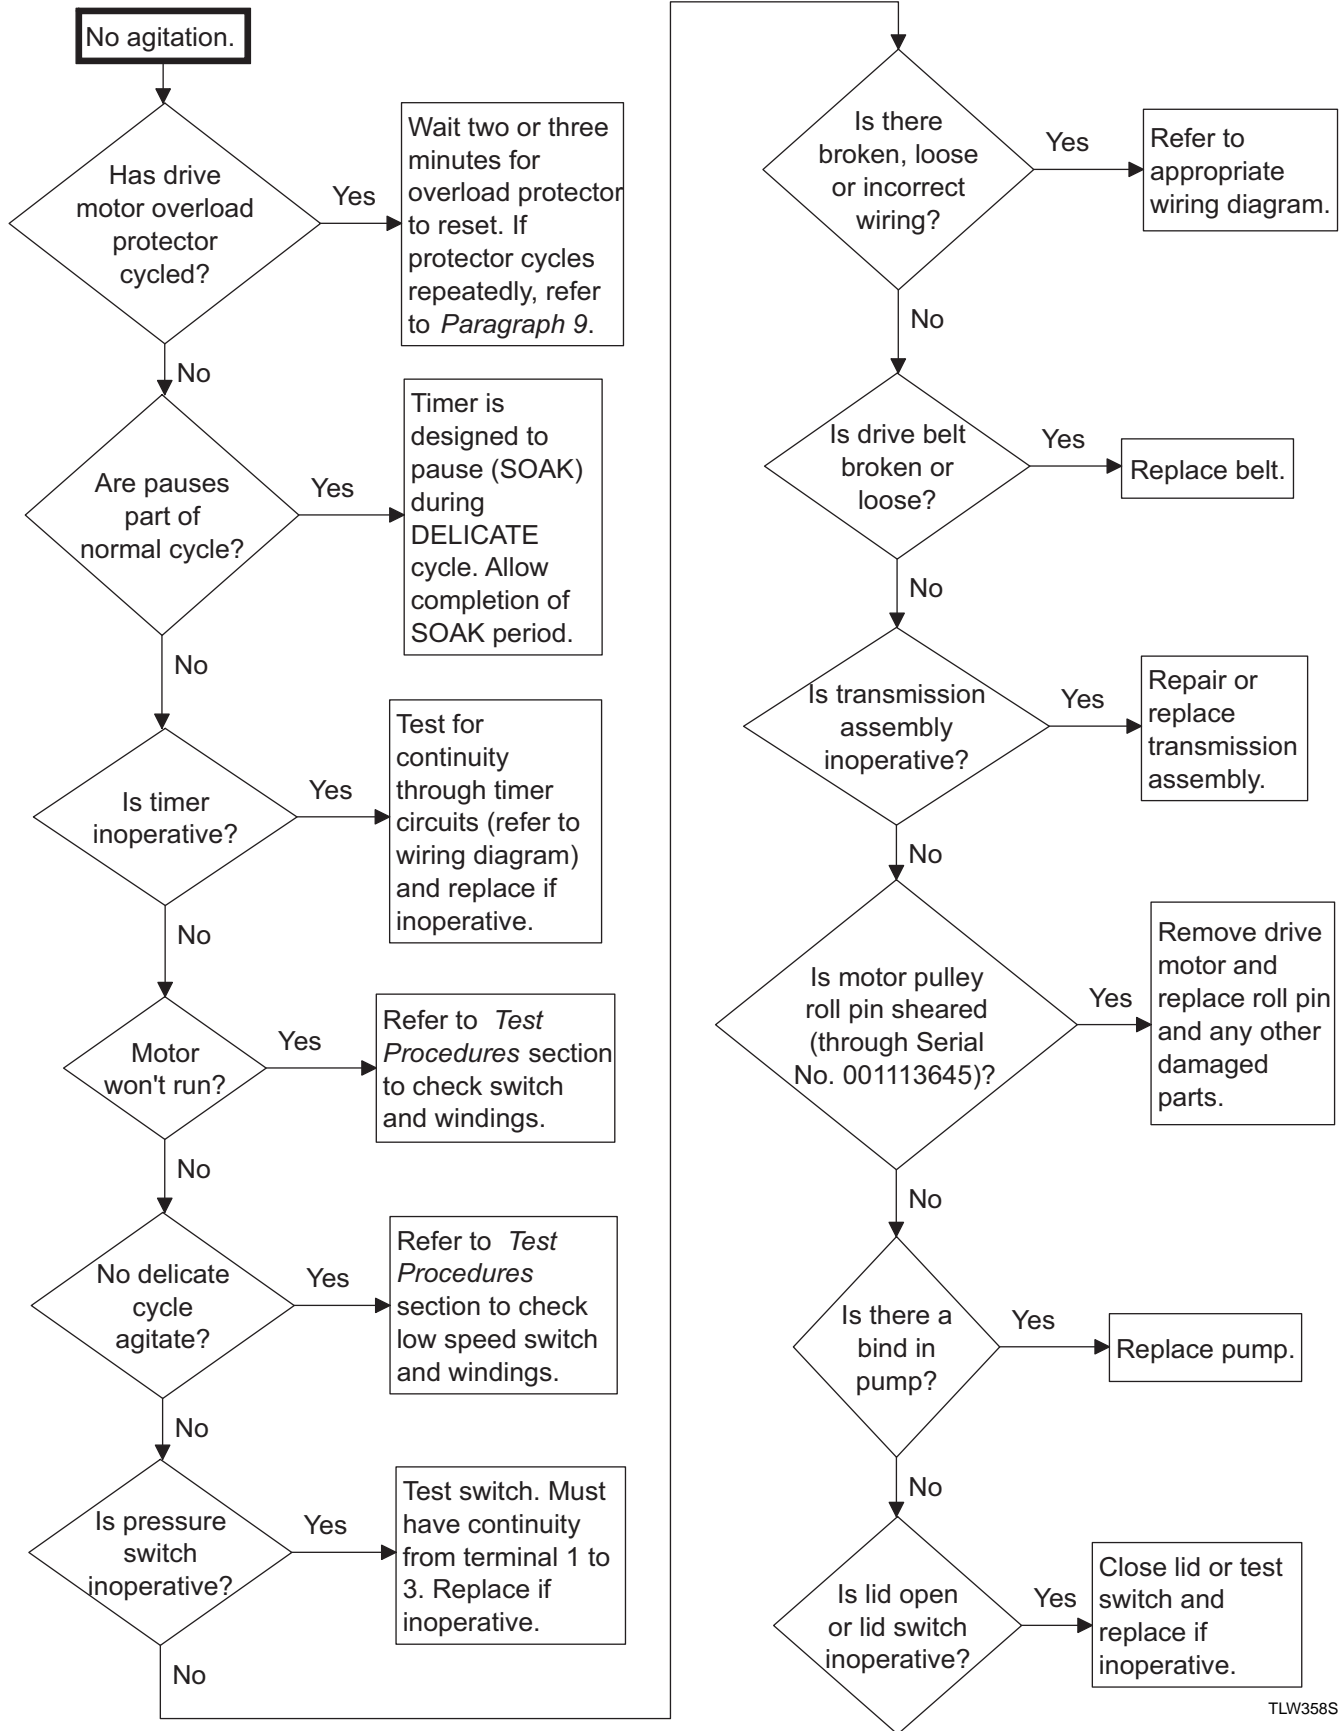


TLW358S

10. Constant Agitation

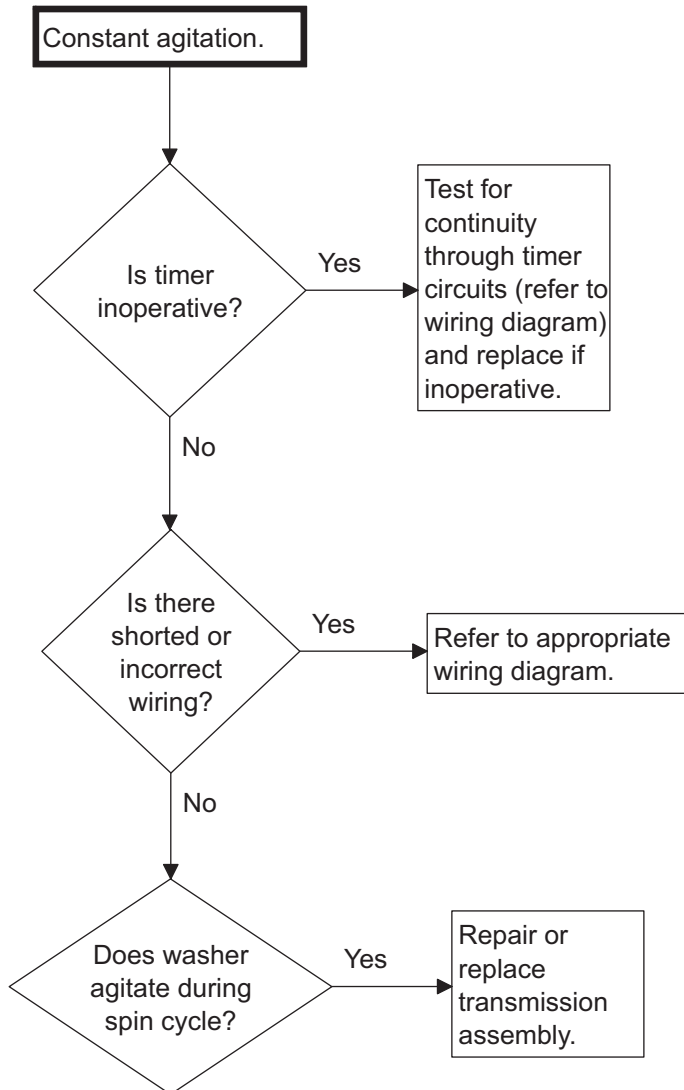


TLW365S

11. Washer Overheats, Cycles On Motor Thermal Protector, Switch Actuator Kicks In And Out

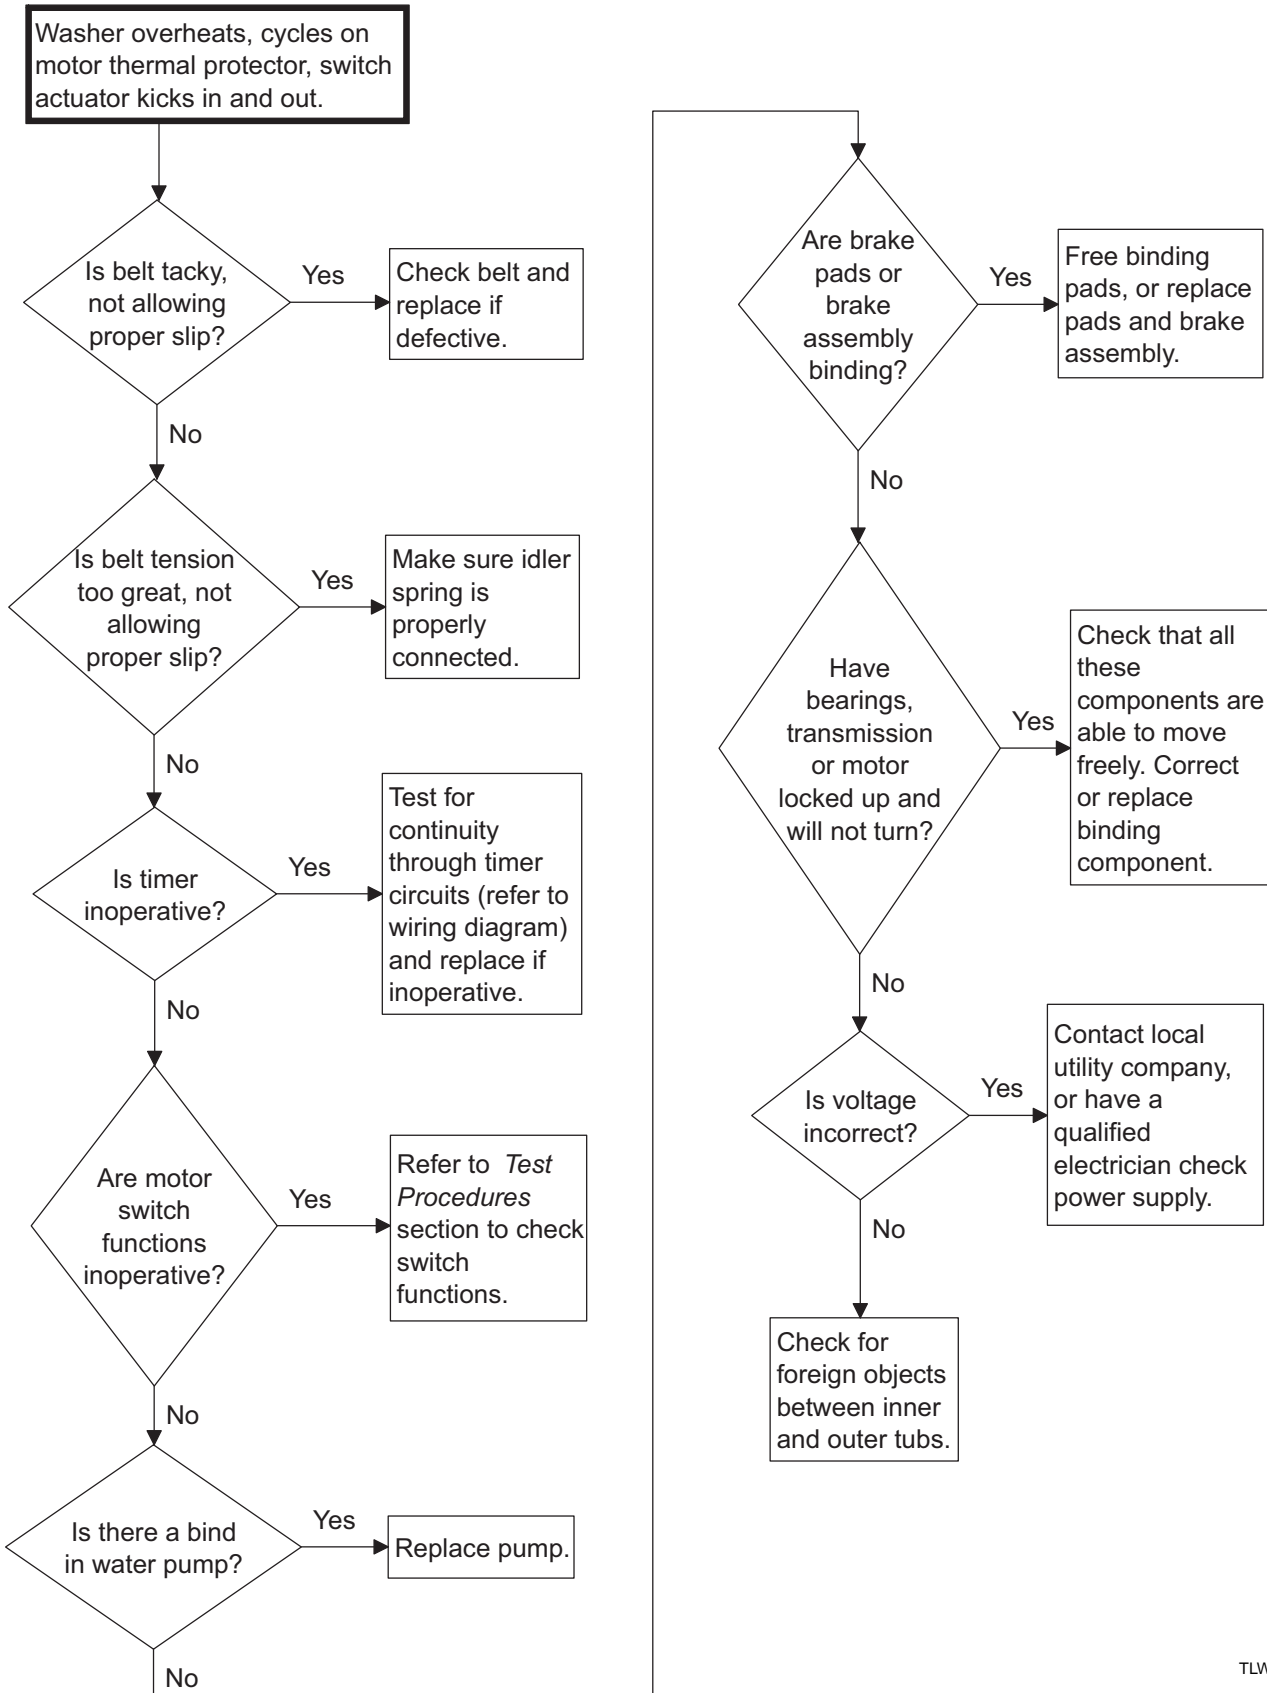


TLW366S

12. Slow Spin

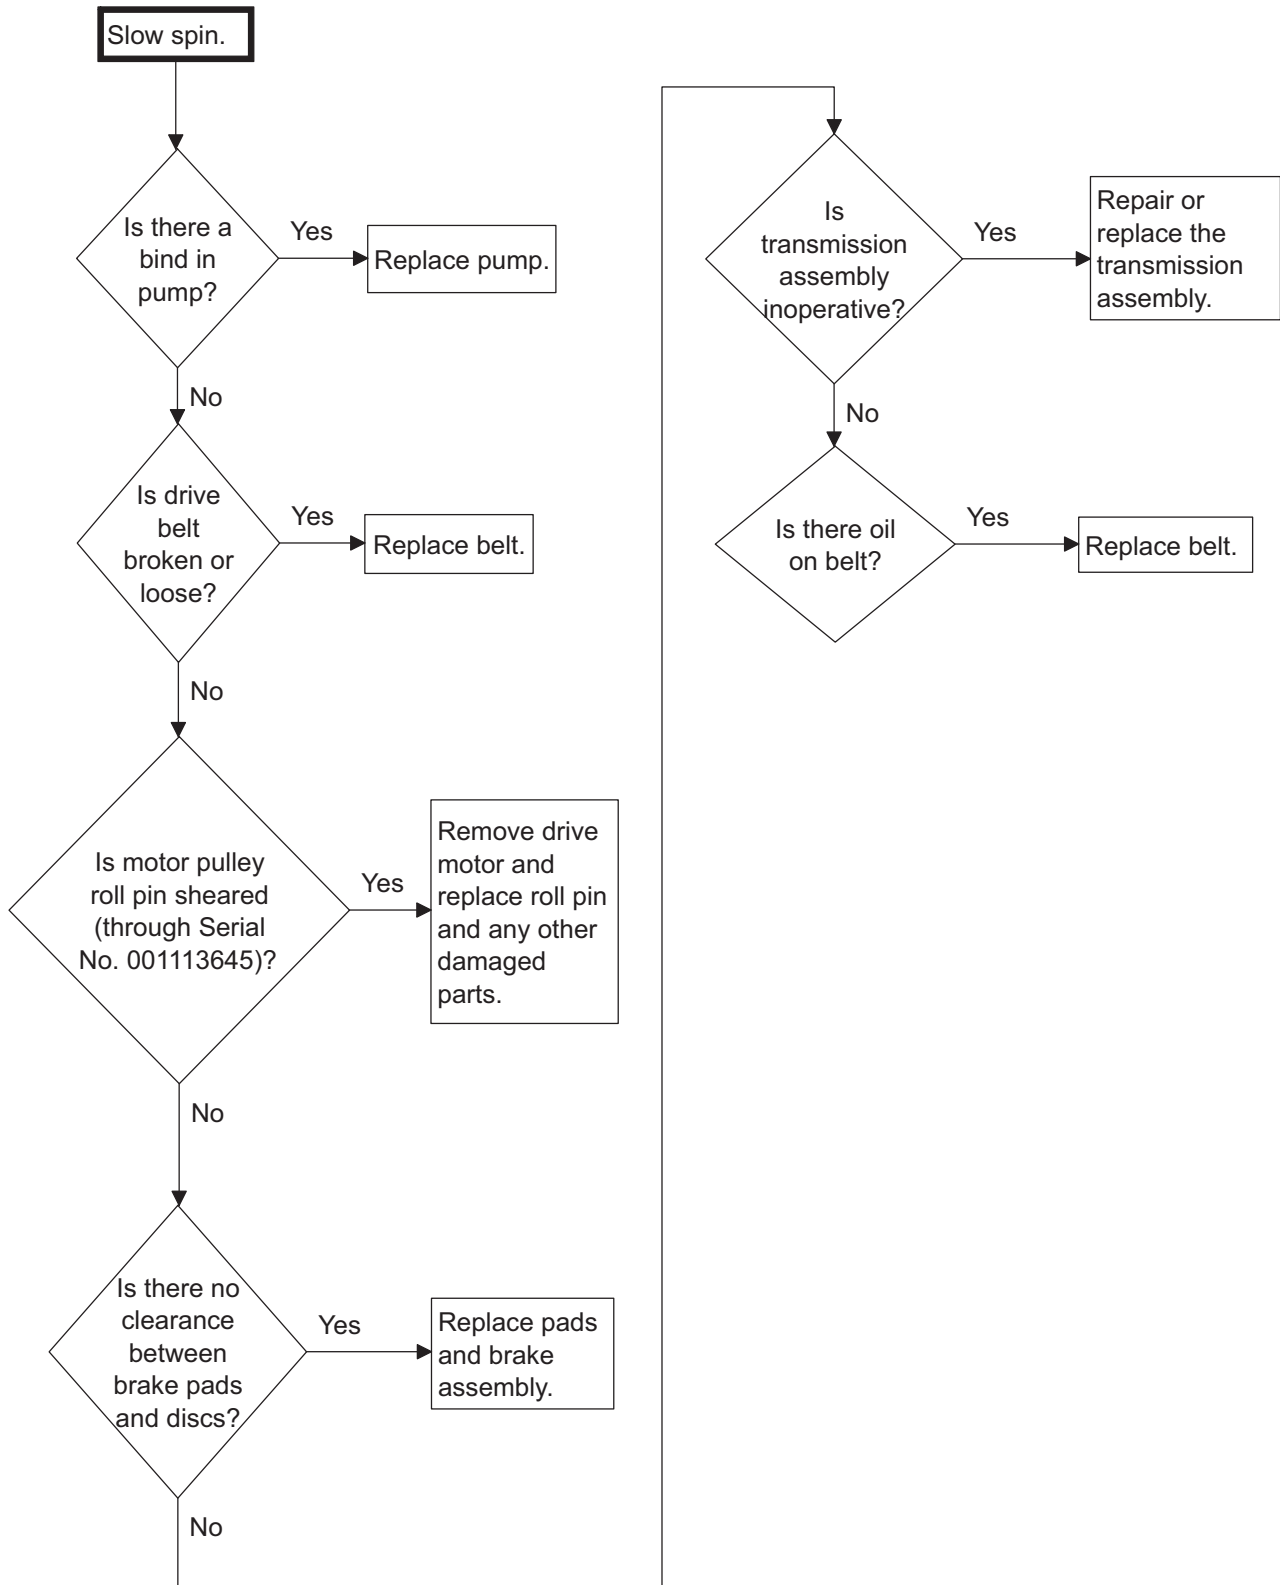


TLW359S

13. No Spin

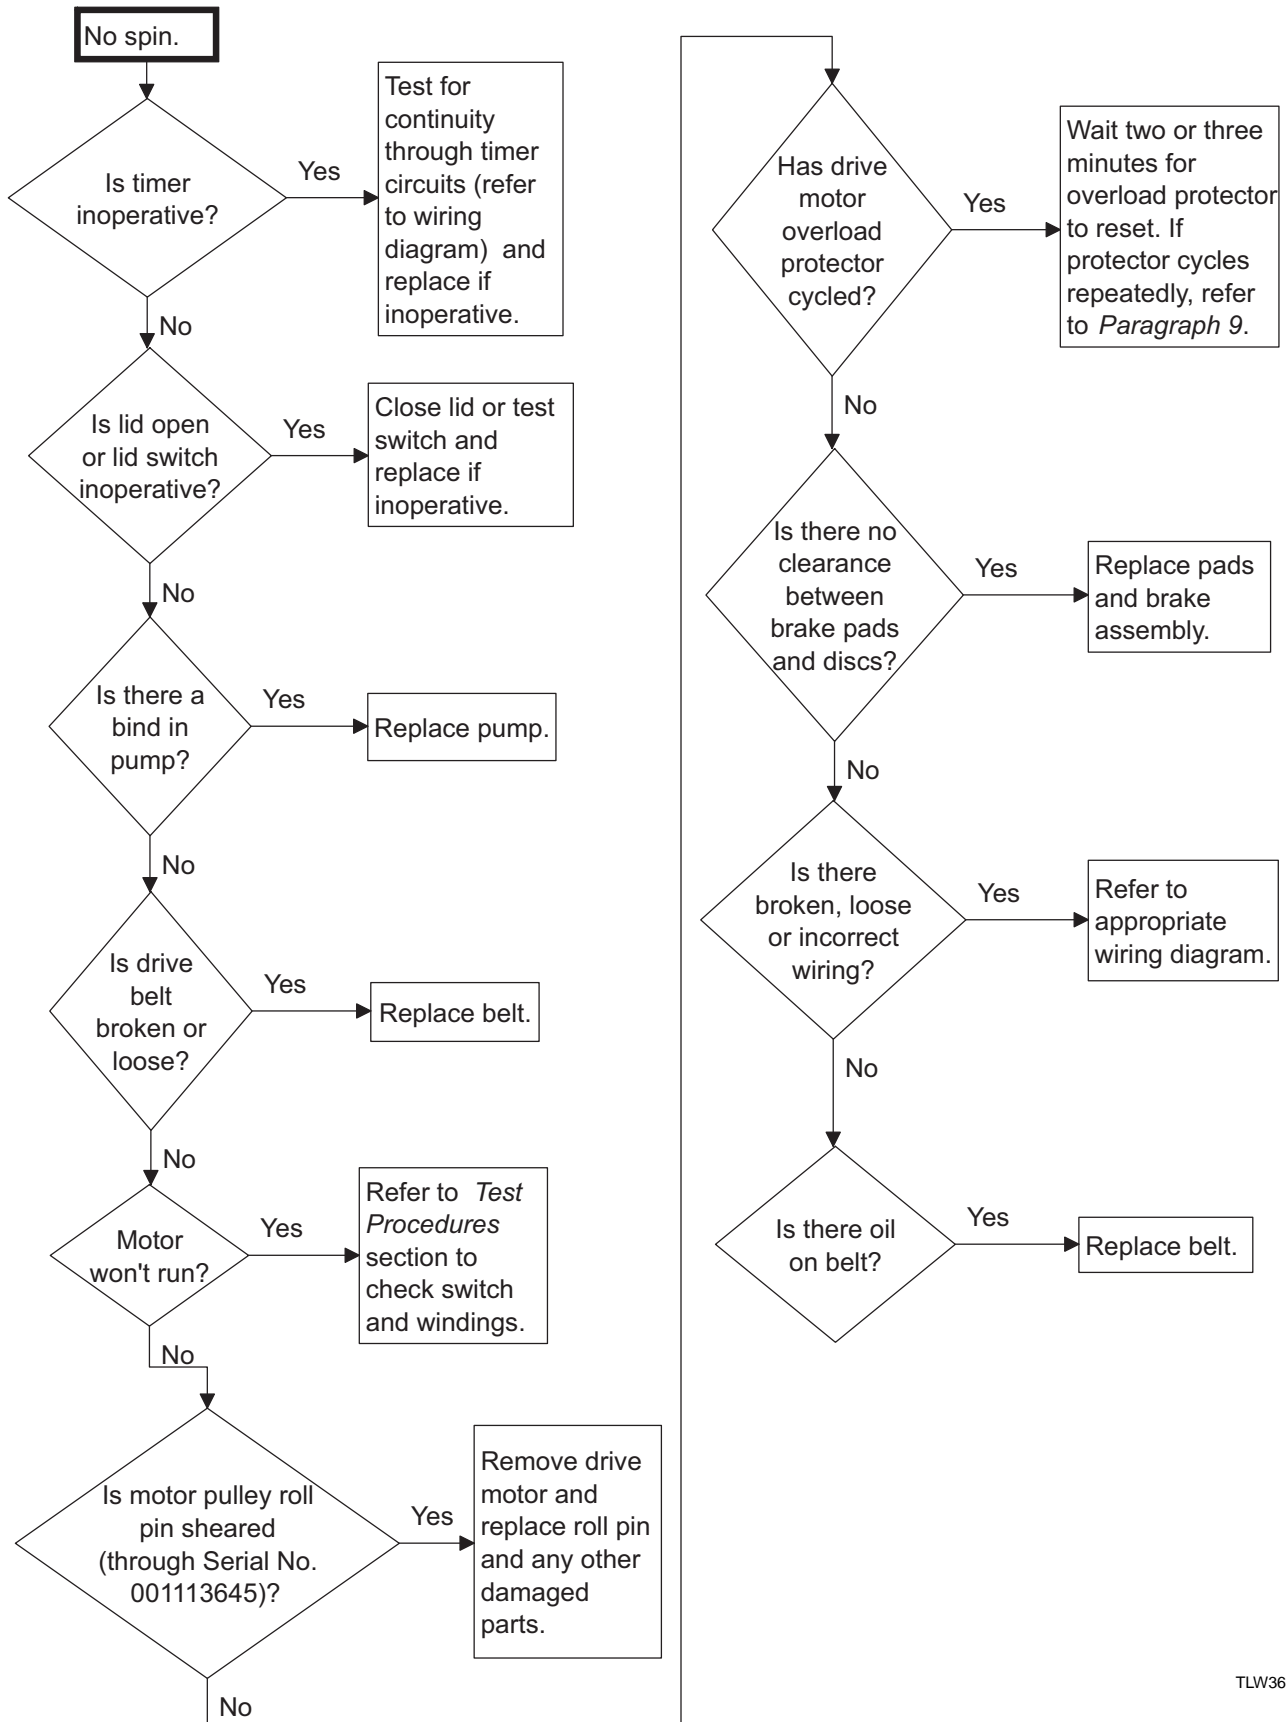


TLW367S

14. Constant Spin

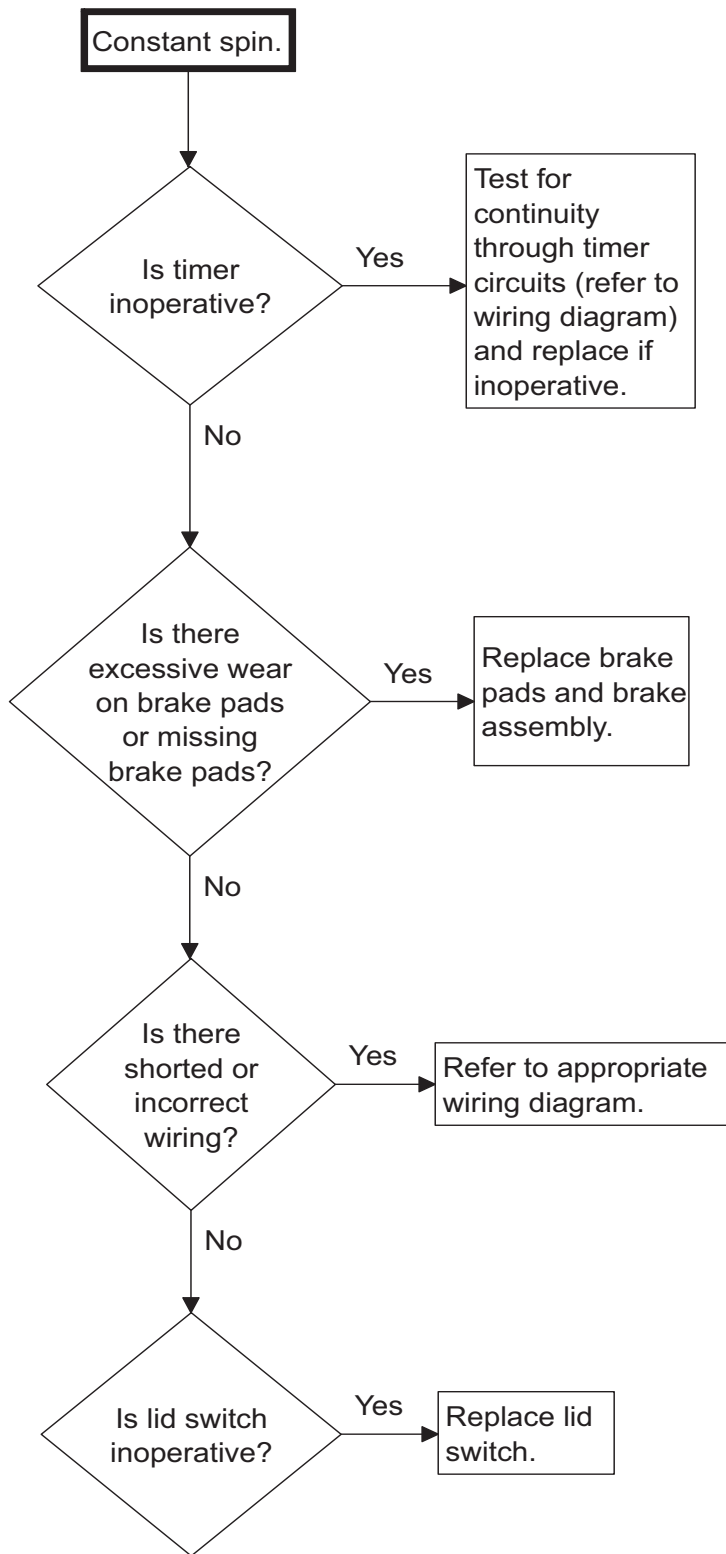


TLW368S

15. Washer Stops In Cycle; Quits After A Couple Loads; Is Intermittent

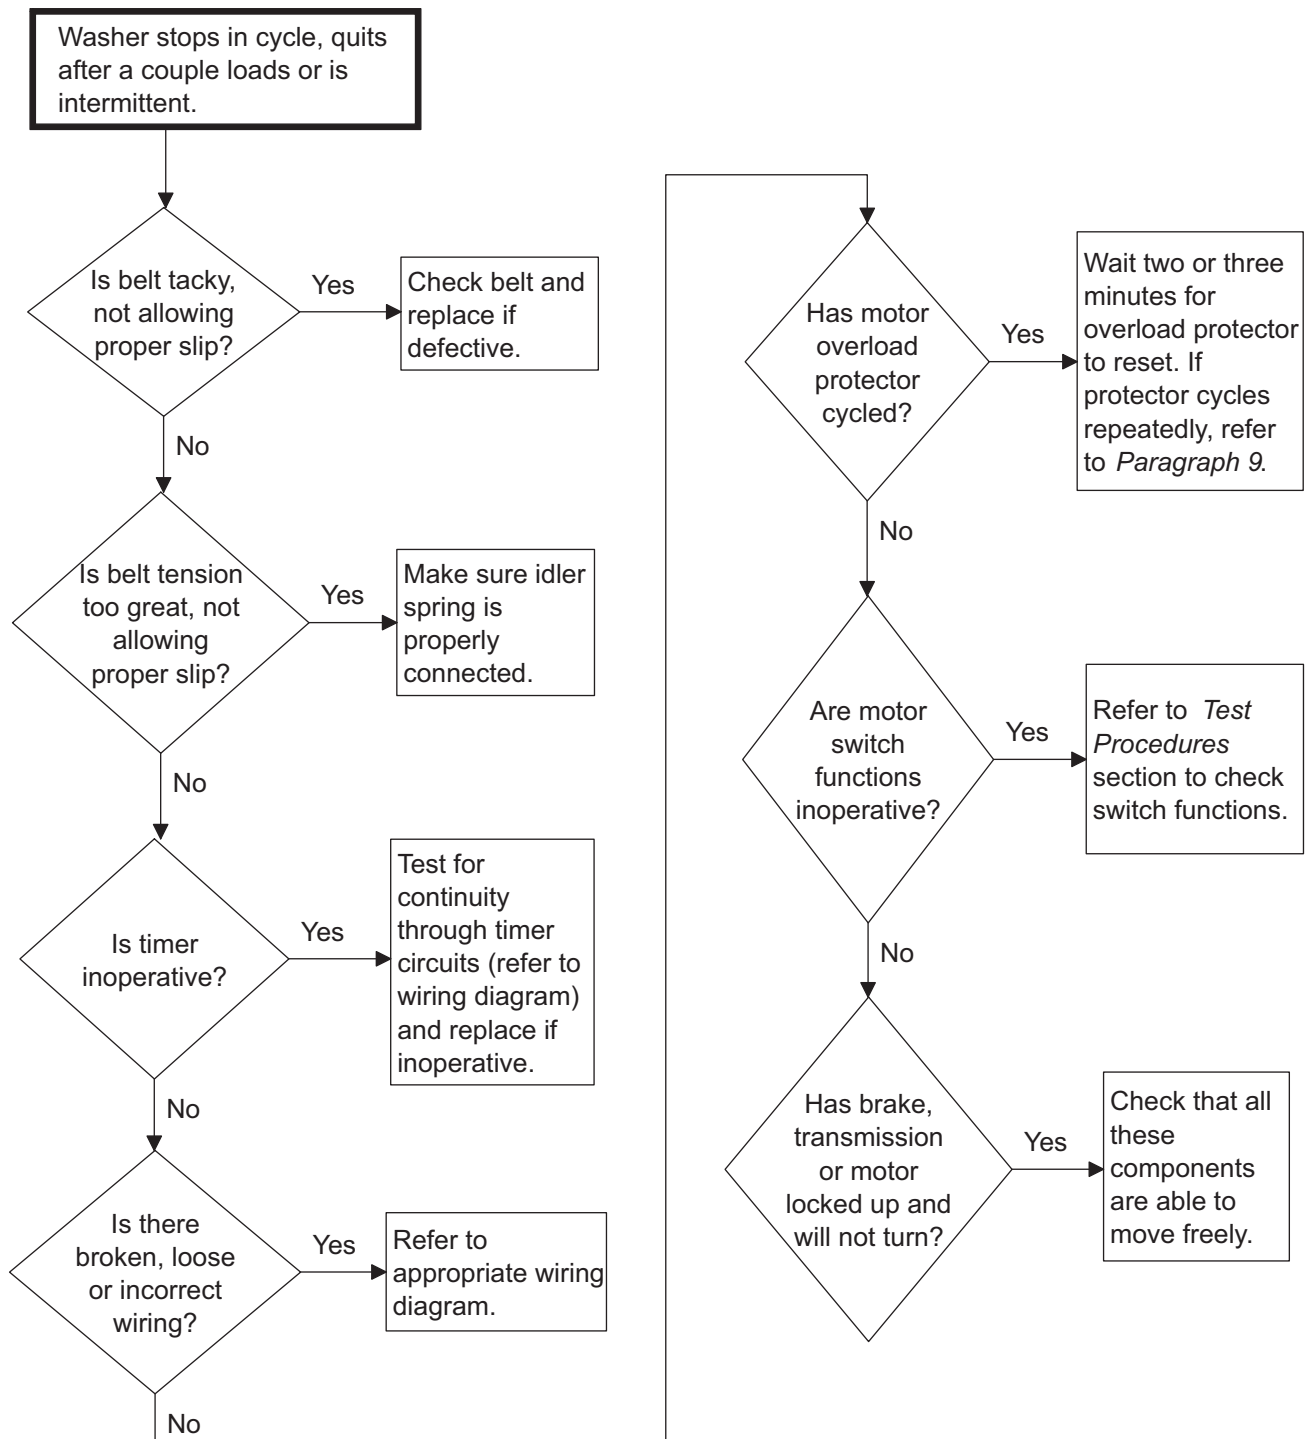


16. Washer Is Locked Up Or Binding

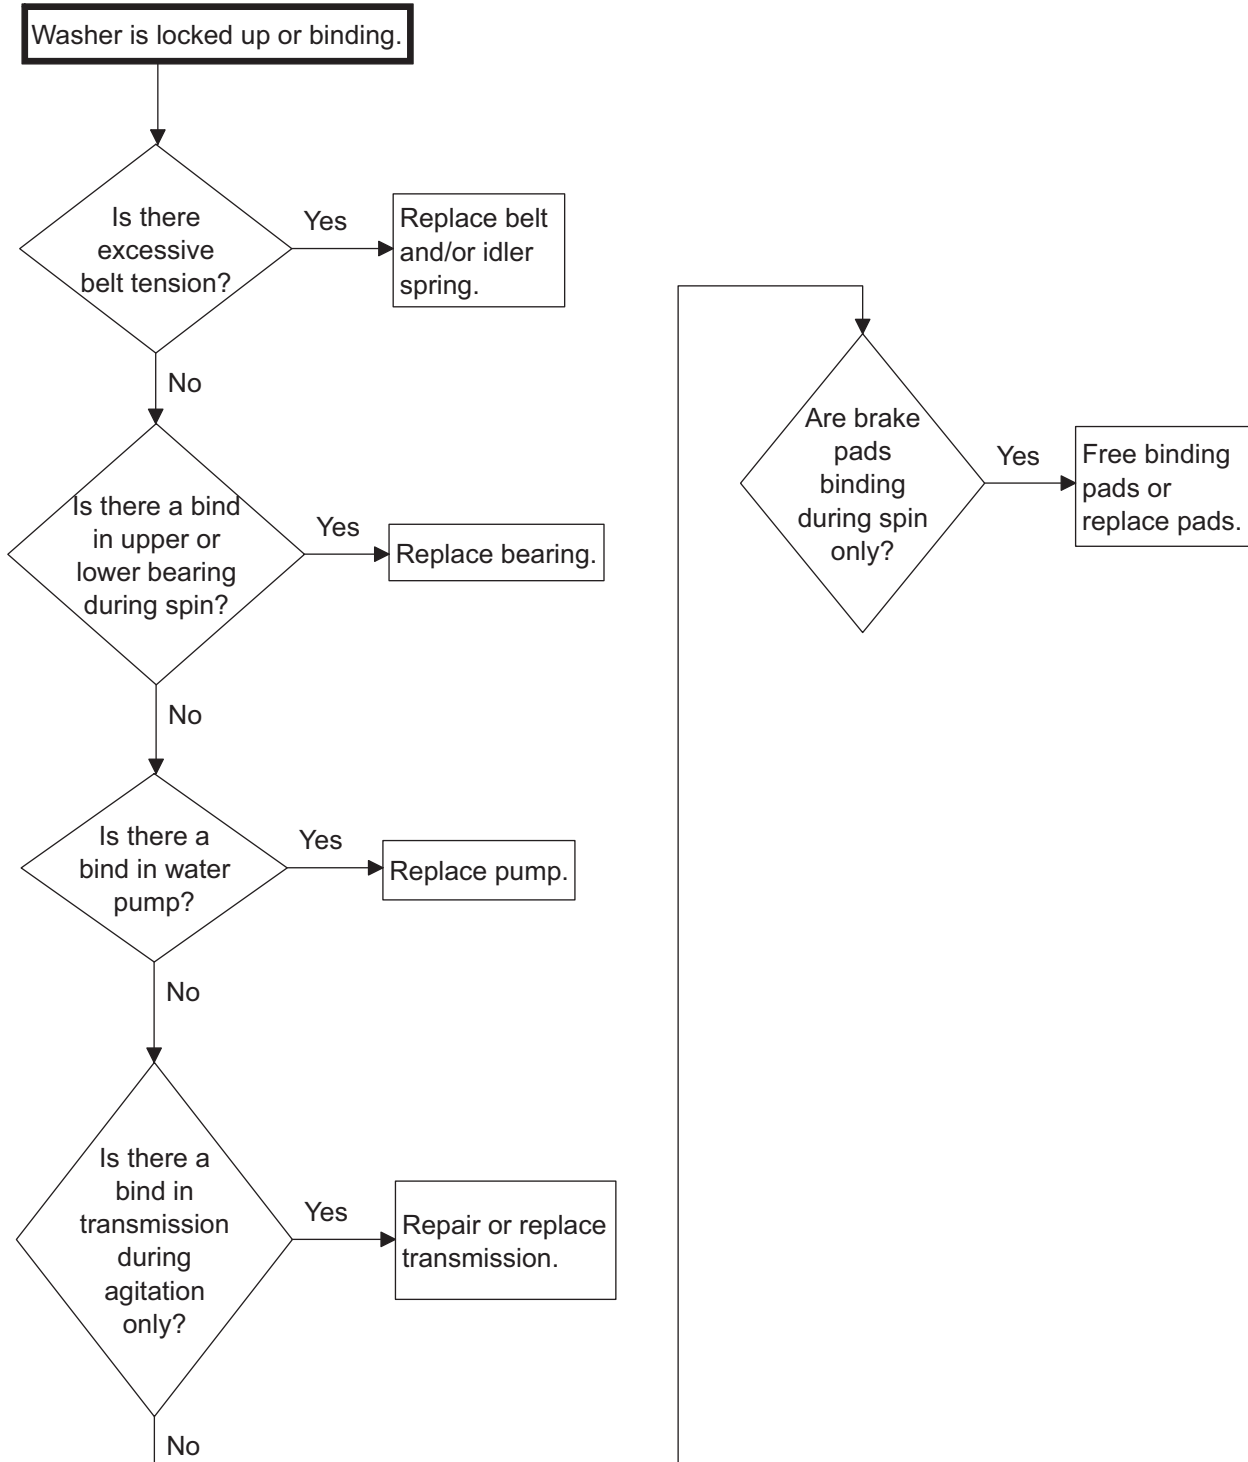


TLW369S

17. Outer Tub Does Not Empty

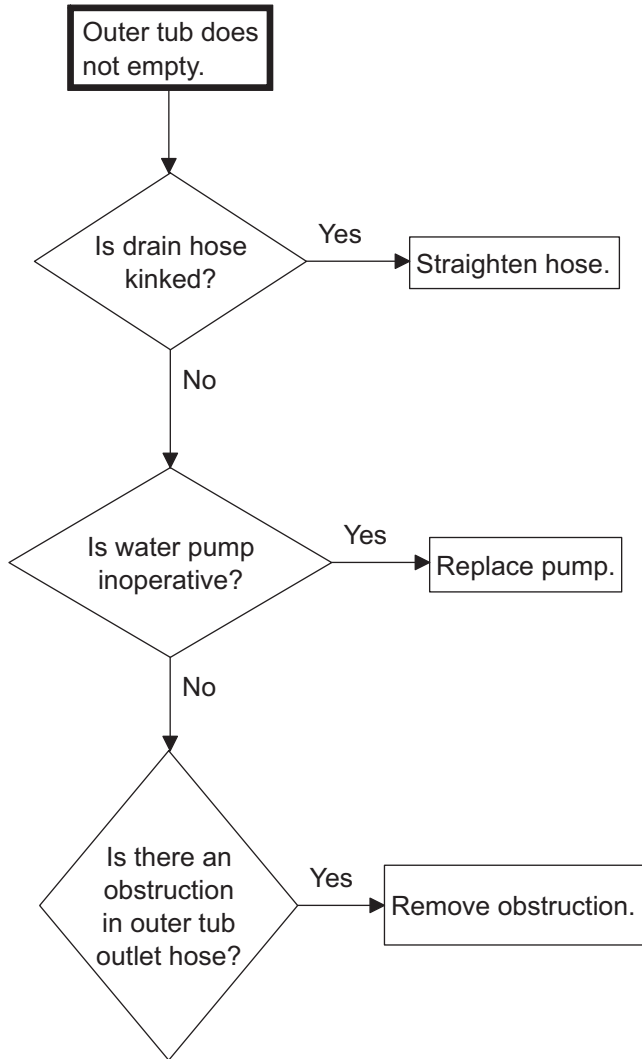


TLW370S

18. Excessive Vibration

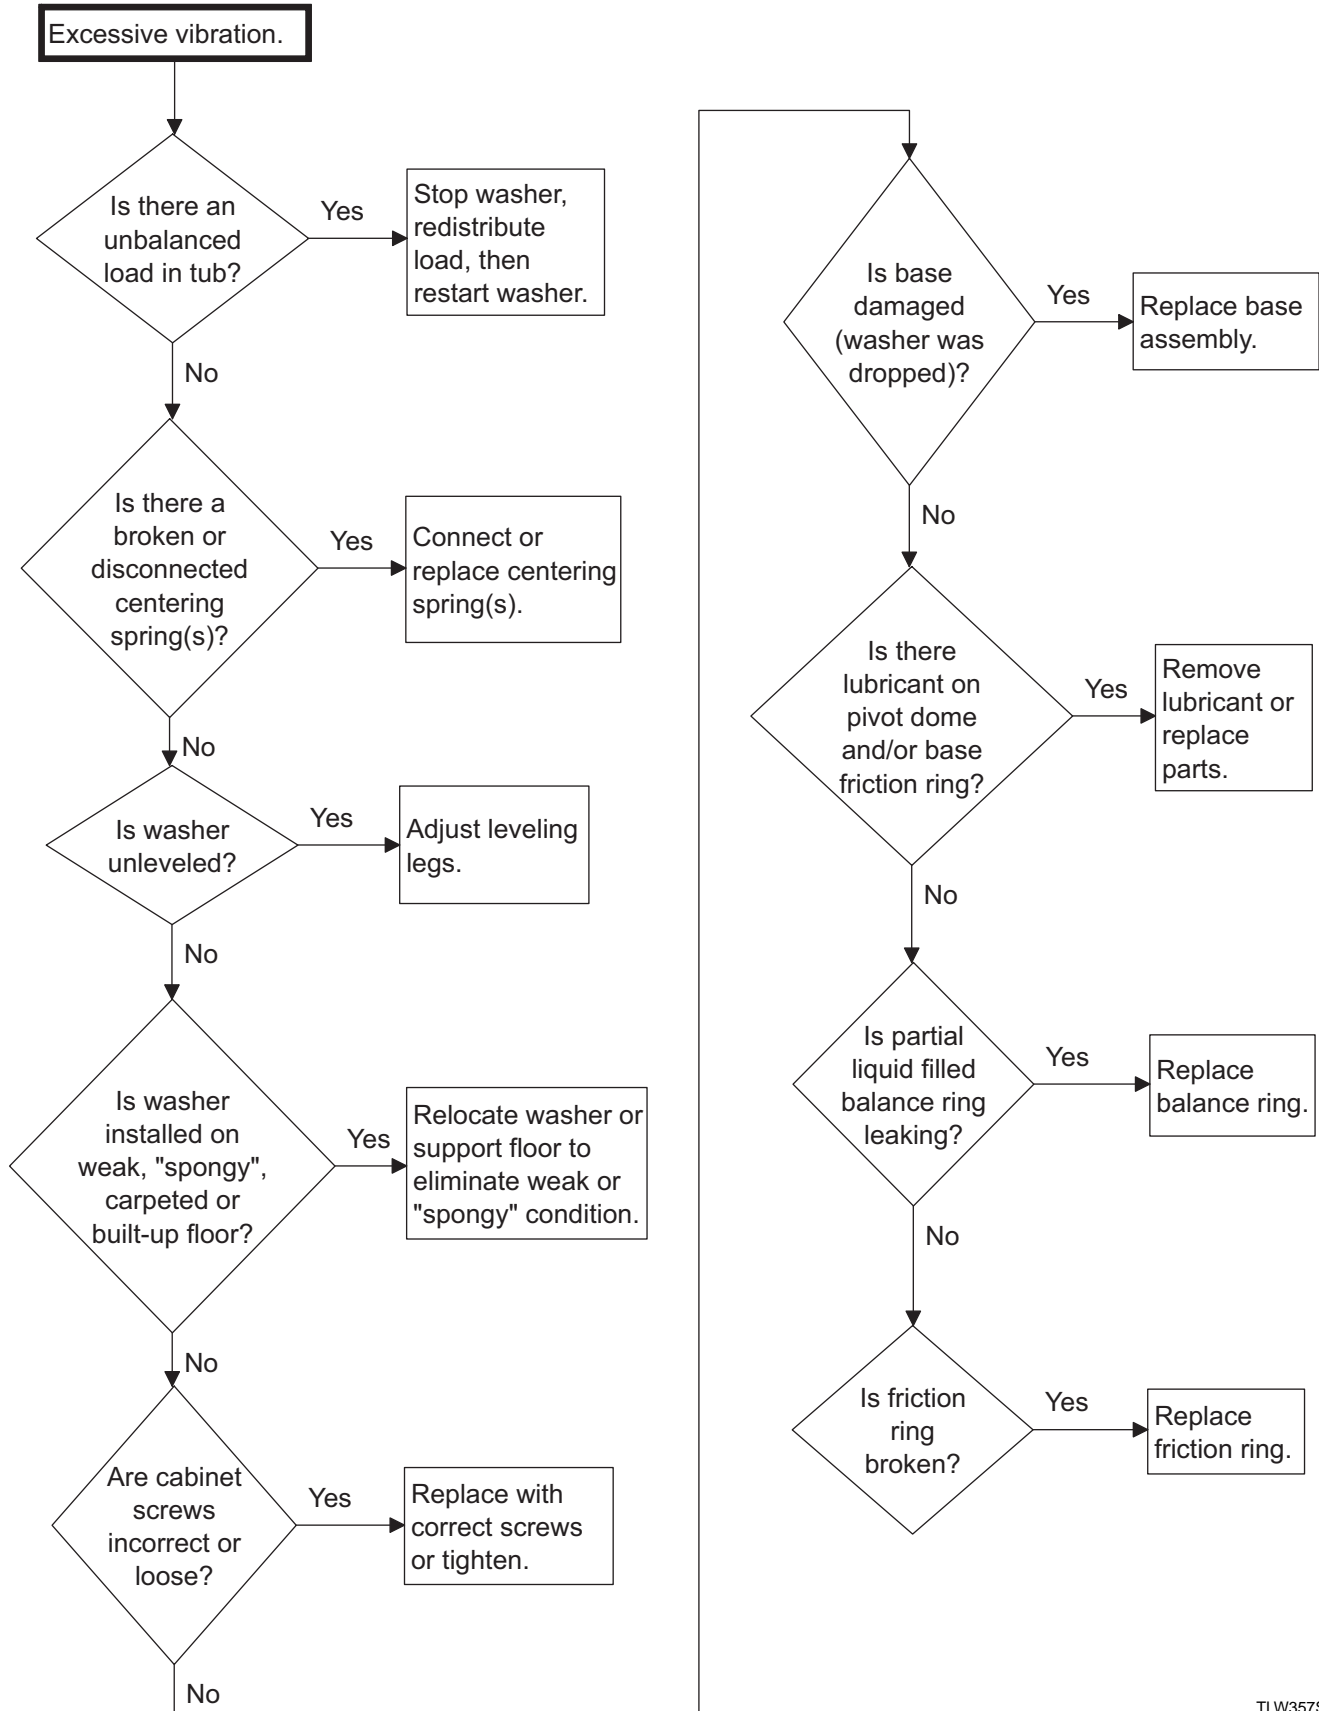

TLW357S

19. Water Leaking From Outer Tub

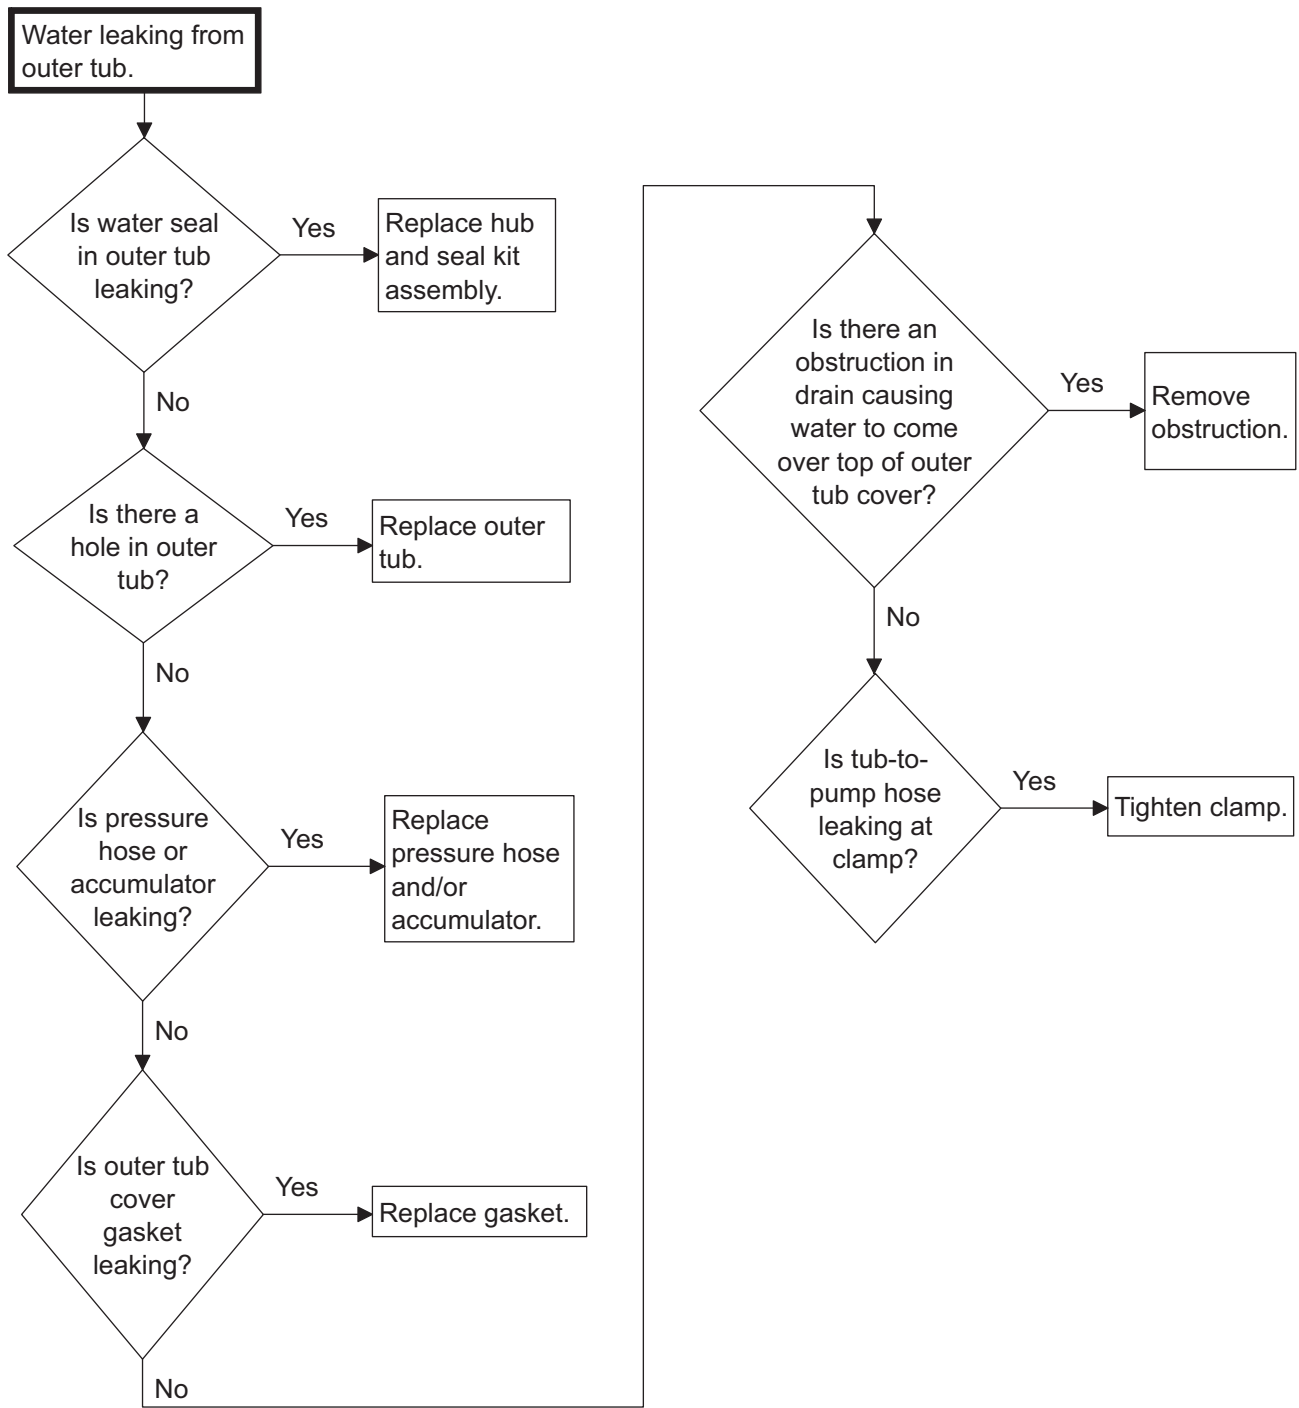

TLW341S

Section 4 Adjustments



WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

20. Leveling Legs

Refer to *Figure 1*.

- Place rubber feet on all four leveling legs.
- Place washer in position on a clean, dry, and reasonably firm floor.
- Loosen locknuts and adjust two front leveling legs. Once adjusted, tilt washer forward on front legs and lower back down into position to set the rear self-leveling legs.

- Washer must not rock. After washer is at desired height, tighten locknuts securely against bottom of washer base. If these locknuts are not tight, washer will not remain stationary during operation.

NOTE: Improper installation, installation on carpet or flexing of a weak floor will cause excessive vibration.

IMPORTANT: Do not slide washer across floor once leveling legs have been extended, as legs and base could become damaged.

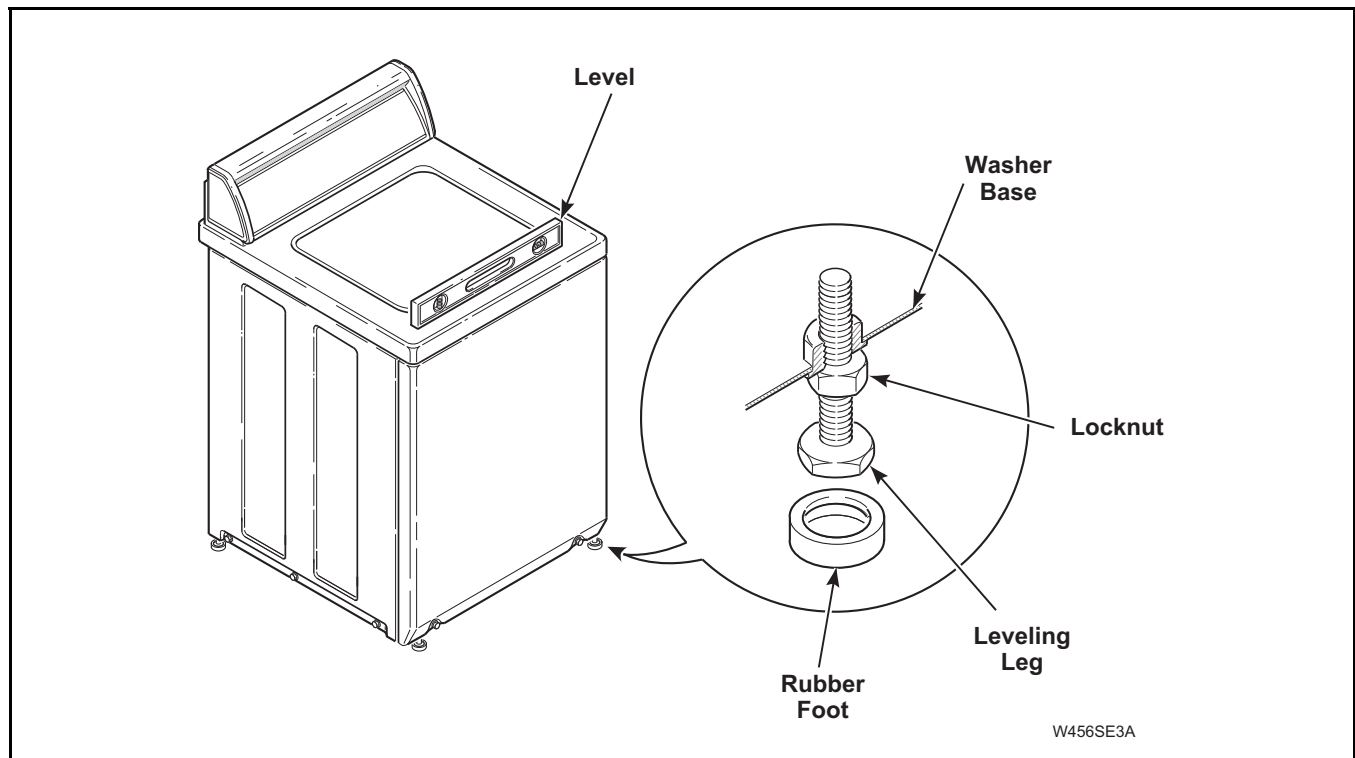


Figure 1



WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

21. Pressure Switch

Refer to *Figure 2*.

NOTE: DO NOT ADJUST PRESSURE SWITCH IF WASHER IS WITHIN THE WARRANTY PERIOD.

Pressure switch is set at the factory for proper water fill levels. However, if there is a problem of overfilling or underfilling, pressure switch can be adjusted.

Maximum water fill level can be increased by turning adjusting screw **CLOCKWISE**, and decreased by turning screw **COUNTERCLOCKWISE**.

One quarter turn of the adjusting screw represents approximately one inch (25.4 mm) increase or decrease of water level in washtub.

IMPORTANT: DO NOT turn adjusting screw more than 3/4 of a turn in either direction as the switch may be damaged and flooding could result.

When testing, pressure switch has continuity from terminal 1 to 2 when empty and 1 to 3 when full.

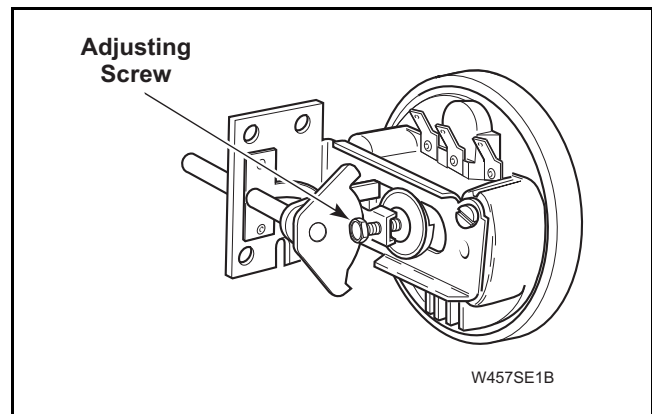



Figure 2

22. Belt (Agitate And Spin)

No belt adjustment is required.


Section 5

Test Procedures

	WARNING
<p>To reduce the risk of electric shock, fire, explosion, serious injury or death:</p> <ul style="list-style-type: none"> • Disconnect electric power to the washer before servicing. • Never start the washer with any guards/panels removed. • Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded. 	
W003	

23. Motor Test Procedure

IMPORTANT: Disconnect base wire harness plug from motor.

	WARNING
Disconnect electric power to washer before performing the following steps:	
W188	

Motor test procedures using an Ohm meter.

NOTE: Resistance readings slightly out of given ranges may be due to meter conditions. These readings **DO NOT** necessarily indicate motor failure.

	Meter Connections	Reading Should Be	If Not
1.	Ground to Each Other Terminal	Open	Terminal shorted to ground.
2.	White to Yellow	Closed	Open thermal overload.
3.	Red to Brown	2-8 Ohms	Start winding open or resistance too high or too low.
4.	Blue to White	1-2 Ohms	High speed winding (4 pole) open or resistance too high or too low.
5.	Violet to White (2-speed motor)	2.5 Ohms (Approximate)	Low winding opening; High speed winding open; or resistance too high or too low.
6.	“R” to Red	Closed	Open start (auxiliary) switch.
7.	“P” to Blue (2-speed motor)	Closed	Open start switch 4 pole winding.

NOTE: Steps 8, 9 and 10 are with motor centrifugal mechanism in the run position.

8.	“R” to Red	Open	Start auxiliary switch.
9.	“P” to Blue (2-speed motor)	3 Ohms (approximate)	Refer to Blue to White and Violet to White.
10.	“P” to Blue (2-speed motor)	Closed	Open low (6 pole) winding run switch.



WARNING

- To reduce the risk of electric shock, fire, explosion, serious injury or death:
- Disconnect electric power to the washer before servicing.
 - Never start the washer with any guards/panels removed.
 - Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

24. Mixing Valve Solenoid Test Procedure

Mixing valve test procedures using an Ohm meter.

NOTE: Resistance readings slightly out of given ranges may be due to meter conditions. These readings **DO NOT** necessarily indicate mixing valve failure.

120 Volt coils	900 - 1100 Ohms
----------------	-----------------

25. Temperature Switch Test Procedure

Check for continuity between the following terminal connections:

3 Position Switches

Temperature		Connection
Wash	Rinse	
Hot	Cold	L - 3
Warm	Cold	L - 3- 4
Cold	Cold	L - 4

4 Position Switches

Temperature		Connection
Wash	Rinse	
Hot	Cold	L1 - 2
Warm	Warm	L1 - 1, L1 - 2, L2 - 2, L2 - 1, L2 - L1, 1 - 2
Warm	Cold	L1 - 2, L1 - 1, 1 - 2
Cold	Cold	L1 - 1

5 Position Switches

Temperature		Connection
Wash	Rinse	
Hot	Cold	L1 - 2
Hot	Warm	L1 - 2, L2 - 2
Warm	Cold	L1 - 1, L1 - 2
Warm	Warm	L1 - 1, L1 - 2, L2 - 2
Cold	Cold	L1 - 1

Section 6 Cycle Sequence Charts

NOTE: Times listed are approximate.

CYCLE	FUNCTION	WATER TEMP. SELECT	*MOTOR SPEED	TIME (Min. & Sec.)
SOAK	SOAK FILL & AGITATE	H,W,C	SLOW	4:00
	SOAK FILL	H,W,C		12:00
	SPIN		SLOW	4:00
OFF				4:00
REGULAR	WASH FILL & AGITATE	H,W,C	FAST	15:30
	SPIN		FAST	2:00
	SPIN & SPRAY	C	FAST	:30
	SPIN		FAST	1:30
	RINSE FILL & AGITATE	W,C	FAST	4:00
	SPIN		FAST	6:00
OFF				4:00
PERMANENT PRESS	WASH FILL & AGITATE	H,W,C	FAST	9:30
	SPIN		SLOW	2:00
	SPIN & SPRAY	C	SLOW	:30
	SPIN		SLOW	1:30
	RINSE FILL & AGITATE	W,C	FAST	4:00
	SPIN		FAST	6:00
OFF				4:00
DELICATE	WASH FILL & SOAK	H,W,C		3:00
	WASH FILL & AGITATE	H,W,C	SLOW	:30
	WASH FILL & SOAK	H,W,C		1:30
	WASH FILL & AGITATE	H,W,C	SLOW	:30
	WASH FILL & SOAK	H,W,C		1:30
	WASH FILL & AGITATE	H,W,C	SLOW	:30
	WASH FILL & SOAK	H,W,C		1:30
	WASH FILL & AGITATE	H,W,C	SLOW	:30
	WASH FILL & SOAK	H,W,C		1:30
	SPIN		SLOW	2:00
	SPIN & SPRAY	C	SLOW	:30
	SPIN		SLOW	1:30
	RINSE FILL & AGITATE	C	SLOW	4:00
	SPIN		SLOW	4:00
	OFF			

***On Single Speed Model Washers, All Speeds are Fast.**

KEY:

H = HOT W = WARM C = COLD

TIMER NO. 37927 CYCLE SEQUENCE

Cycle Sequence Charts

NOTE: Times listed are approximate.

CYCLE	FUNCTION	WATER TEMP. SELECT	*MOTOR SPEED	TIME (Min. & Sec.)
REGULAR	WASH FILL & AGITATE	H,W,C	FAST	15:00
	SPIN		FAST	1:30
	SPIN & SPRAY	C	FAST	:25
	SPIN		FAST	2:35
	RINSE FILL & AGITATE	W,C	FAST	3:00
	SPIN		FAST	6:00
OFF				3:00
PERMANENT PRESS	WASH FILL & AGITATE	H,W,C	FAST	9:00
	SPIN		SLOW	1:30
	SPIN & SPRAY	C	SLOW	:25
	SPIN		SLOW	2:35
	RINSE FILL & AGITATE	W,C	FAST	3:00
	SPIN		FAST	6:00
OFF				3:00
DELICATE	WASH FILL & SOAK	H,W,C		1:30
	WASH FILL & AGITATE	H,W,C	SLOW	:25
	WASH FILL & SOAK	H,W,C		2:35
	WASH FILL & AGITATE	H,W,C	SLOW	:25
	WASH FILL & SOAK	H,W,C		2:35
	WASH FILL & AGITATE	H,W,C	SLOW	:25
	WASH FILL & SOAK	H,W,C		1:05
	SPIN		SLOW	1:30
	SPIN & SPRAY	C	SLOW	:25
	SPIN		SLOW	2:35
	RINSE FILL & AGITATE	C	SLOW	3:00
	SPIN		SLOW	3:00
OFF				3:00

***On Single Speed Model Washers, All Speeds are Fast.**

KEY:

H = HOT W = WARM C = COLD

TIMER NO. 37929 CYCLE SEQUENCE

Cycle Sequence Charts

NOTE: Times listed are approximate.

CYCLE	FUNCTION	WATER TEMP. SELECT	*MOTOR SPEED	TIME (Min. & Sec.)
REGULAR	WASH FILL & AGITATE	H,W,C	FAST	15:00
	SPIN		FAST	1:30
	SPIN & SPRAY	C	FAST	:25
	SPIN		FAST	2:35
	RINSE FILL & AGITATE	W,C	FAST	3:00
	SPIN		FAST	6:00
OFF				3:00
PERMANENT PRESS	WASH FILL & AGITATE	H,W,C	FAST	9:00
	SPIN		FAST	1:30
	SPIN & SPRAY	C	FAST	:25
	SPIN		FAST	2:35
	RINSE FILL & AGITATE	W,C	FAST	3:00
	SPIN		FAST	6:00
OFF				3:00
DELICATE	WASH FILL & SOAK	H,W,C		1:30
	WASH FILL & AGITATE	H,W,C	FAST	:25
	WASH FILL & SOAK	H,W,C		2:35
	WASH FILL & AGITATE	H,W,C	FAST	:25
	WASH FILL & SOAK	H,W,C		2:35
	WASH FILL & AGITATE	H,W,C	FAST	:25
	WASH FILL & SOAK	H,W,C		1:05
	SPIN		FAST	1:30
	SPIN & SPRAY	C	FAST	:25
	SPIN		FAST	2:35
	RINSE FILL & AGITATE	C	FAST	3:00
	SPIN		FAST	3:00
OFF				3:00

***On Single Speed Model Washers, All Speeds are Fast.**

KEY:

H = HOT W = WARM C = COLD

TIMER NO. 200927P CYCLE SEQUENCE

Cycle Sequence Charts

NOTE: Times listed are approximate.

CYCLE	FUNCTION	WATER TEMP. SELECT	*MOTOR SPEED	TIME (Min. & Sec.)
SOAK	SOAK FILL & AGITATE	H,W,C	SLOW	4:00
	SOAK FILL	H,W,C		12:00
	SPIN		SLOW	4:00
OFF				4:00
REGULAR	WASH FILL & AGITATE	H,W,C	FAST	15:30
	SPIN		FAST	:24
	RINSE FILL & AGITATE	W,C	FAST	3:37
	SPIN		FAST	1:13
	SPIN & SPRAY	C	FAST	:30
	SPIN		FAST	6:00
OFF				4:00
PERMANENT PRESS	WASH FILL & AGITATE	H,W,C	FAST	9:30
	SPIN		SLOW	:24
	RINSE FILL & AGITATE	W,C	FAST	3:37
	SPIN		FAST	1:13
	SPIN & SPRAY	C	FAST	:30
	SPIN		FAST	6:00
OFF				4:00
DELICATE	WASH FILL & SOAK	H,W,C		1:30
	WASH FILL & AGITATE	H,W,C	FAST	:30
	WASH FILL & SOAK	H,W,C		1:30
	WASH FILL & AGITATE	H,W,C	FAST	:30
	WASH FILL & SOAK	H,W,C		1:30
	WASH FILL & AGITATE	H,W,C	FAST	:30
	WASH FILL & SOAK	H,W,C		1:30
	WASH FILL & AGITATE	H,W,C	FAST	:30
	WASH FILL & SOAK	H,W,C		1:30
	SPIN		SLOW	:24
	RINSE FILL & AGITATE	C	SLOW	3:37
	SPIN		SLOW	1:13
	SPIN & SPRAY	C	SLOW	:30
	SPIN		SLOW	4:00
OFF				4:00

***On Single Speed Model Washers, All Speeds are Fast.**

KEY:

H = HOT W = WARM C = COLD

TIMER NO. 201101 CYCLE SEQUENCE

Cycle Sequence Charts

NOTE: Times listed are approximate.

CYCLE	FUNCTION	WATER TEMP. SELECT	*MOTOR SPEED	TIME (Min. & Sec.)
REGULAR	WASH FILL & AGITATE	H,W,C	FAST	15:00
	SPIN		FAST	:24
	RINSE FILL & AGITATE	W,C	FAST	3:00
	SPIN		FAST	1:00
	SPIN & SPRAY	C	FAST	:30
	SPIN		FAST	6:00
OFF				3:00
PERMANENT PRESS	WASH FILL & AGITATE	H,W,C	FAST	9:00
	SPIN		FAST	:24
	RINSE FILL & AGITATE	W,C	FAST	3:00
	SPIN		FAST	1:00
	SPIN & SPRAY	C	FAST	:30
	SPIN		FAST	6:00
OFF				3:00
DELICATE	WASH FILL & SOAK	H,W,C		1:30
	WASH FILL & AGITATE	H,W,C	FAST	:25
	WASH FILL & SOAK	H,W,C		2:35
	WASH FILL & AGITATE	H,W,C	FAST	:25
	WASH FILL & SOAK	H,W,C		2:35
	WASH FILL & AGITATE	H,W,C	FAST	:25
	WASH FILL & SOAK	H,W,C		1:05
	SPIN		FAST	:24
	RINSE FILL & AGITATE	C	FAST	3:00
	SPIN		FAST	1:00
	SPIN & SPRAY	C	FAST	:30
	SPIN		SLOW	3:00
	OFF			

***On Single Speed Model Washers, All Speeds are Fast.**

KEY:

H = HOT W = WARM C = COLD

TIMER NO. 201100 CYCLE SEQUENCE

Cycle Sequence Charts

NOTE: Times listed are approximate.

CYCLE	FUNCTION	WATER TEMP. SELECT	*MOTOR SPEED	TIME (Min. & Sec.)
SOAK/ PREWASH	SOAK FILL & AGITATE	H,W,C	SLOW	3:00
	SOAK FILL	H,W,C		12:00
	SPIN		SLOW	3:00
OFF				6:00
HEAVY DUTY/ PERMANENT PRESS	WASH FILL & AGITATE	H,W,C	FAST	15:00
	SPIN		SLOW	3:00
	SPIN & SPRAY	C	SLOW	:24
	SPIN		SLOW	3:00
	RINSE FILL & AGITATE	C	FAST	3:00
	SPIN		FAST	6:00
OFF/PAUSE	CYCLE END OR PAUSE FOR EXTRA RINSE			3:00
EXTRA RINSE	RINSE FILL & AGITATE	C		3:00
	SPIN		FAST	6:00
OFF				6:00
NORMAL ECO	WASH FILL & AGITATE	C	FAST	9:00
	SPIN		SLOW	3:00
	SPIN & SPRAY	C	SLOW	:24
	SPIN		SLOW	3:00
	SPIN & SPRAY	C	SLOW	:24
	SPIN		SLOW	3:00
	SPIN & SPRAY	C	SLOW	:24
	SPIN		SLOW	3:00
	SPIN		FAST	9:00
OFF				6:00
DELICATE	WASH FILL & SOAK	H,W,C		3:00
	WASH FILL & AGITATE	H,W,C	SLOW	:24
	WASH FILL & SOAK	H,W,C		2:30
	WASH FILL & AGITATE	H,W,C	SLOW	:24
	WASH FILL & SOAK	H,W,C		2:30
	SPIN		SLOW	3:00
	SPIN & SPRAY	C	SLOW	:24
	SPIN		SLOW	3:00
	RINSE FILL & AGITATE	C	SLOW	3:00
	SPIN		SLOW	3:00
	OFF/PAUSE	CYCLE END OR PAUSE FOR EXTRA RINSE		
EXTRA RINSE	RINSE FILL & AGITATE	C		3:00
	SPIN		SLOW	3:00
OFF	OFF			6:00

TIMER NO. 202705 AND 203387 CYCLE SEQUENCE

***On Single Speed Model Washers, All Speeds are Fast.**

KEY:

H = HOT W = WARM C = COLD

TIMER NO. 202705 AND 203387 CYCLE SEQUENCE

